 


Husqvarna

VIKING

Spare parts list

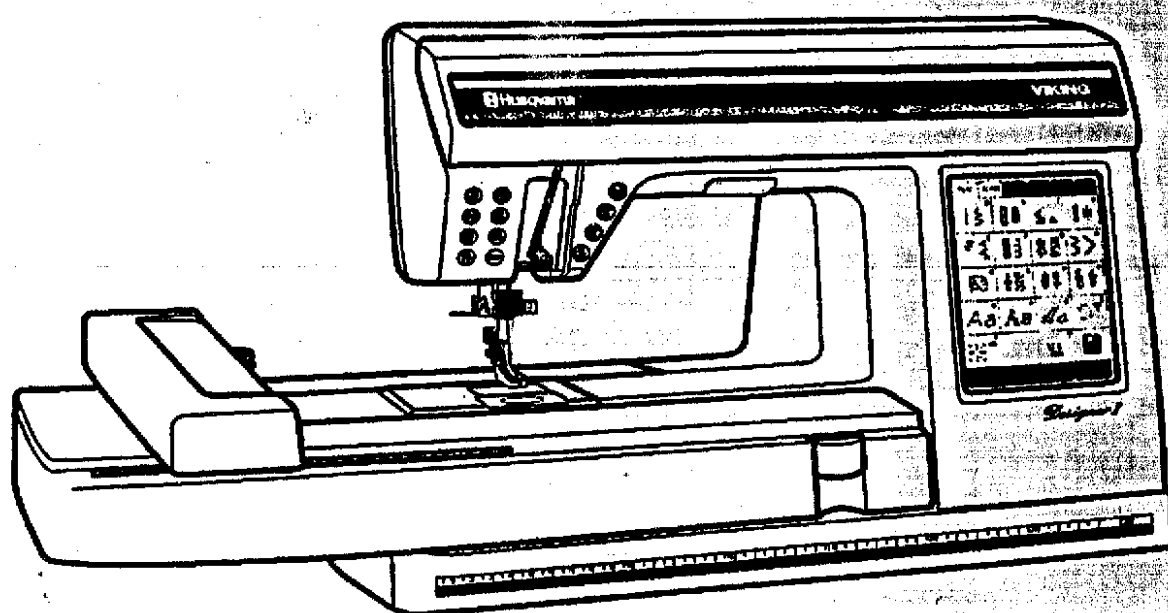


Designer I


Part No	Description	Page	Part No	Description	Page
411 72 10-01	Washer	G	412 44 68-01	Grip 150x240	S
411 75 00-08	Needle bar	K	412 44 83-45	Circuit board	C
411 75 03-02	Screw	K	412 44 87-01	Spring, bobbin winding	B
411 75 04-01	Screw	K	412 45 09-01	Touch board	A
411 78 10-03	Lamp	A, K	412 45 11-01	Circuit board, push buttons left	A
411 96 68-01	Screw	A, D, K, P, R	412 45 23-01	Knife, compl	B
411 96 68-03	Screw	K	412 45 24-01	Knife holder	B
411 96 68-04	Screw	K	412 45 38-01	Circuit board, push buttons right	M
411 96 68-05	Screw	A, M	412 46 45-01	Screw	E
411 96 68-07	Screw	P	412 47 18-01	Thread tension	E
411 96 68-08	Screw	P	412 49 17-01	Floppy disk drive	A
411 96 68-10	Screw	B	412 49 25-01	Foot control compl.	N
411 96 68-12	Screw	C	412 49 30-01	Control unit with winder	N
411 96 68-20	Screw	AB	412 49 49-01	Distance	C
411 96 68-21	Screw	K	412 50 01-01	Sewing head, frame compl	K
411 96 68-24	Screw	K			
411 96 68-25	Screw PT 16"8	M, K	412 50 08-01	Bearing	K
411 96 71-07	Screw	C	412 50 08-01	Gear segment	K
411 96 72-04	Screw M 3"6	P	412 50 09-01	Spring	K
411 96 73-06	Screw 25"6	R	412 50 10-01	Spring	K
411 96 74-01	Screw	A	412 50 11-01	Link	K
411 96 75-01	Washer	M	412 50 15-01	Bearing	K
411 98 14-01	Washer	S	412 50 19-01	Back holder, needle threader	K
412 00 13-01	Washer	E	412 50 20-01	Front holder, needle threader	K
412 05 60-01	Screw	C	412 50 21-01	Needle threader	K
412 05 60-04	Screw	A, F, H, P	412 50 22-01	Setting plate	K
412 05 60-06	Screw	B, C, F, H, I, L	412 50 23-02	Eccentric needle adjust.	K
412 05 60-10	Screw	C, F	412 50 24-01	Cross head compl.	K
412 05 60-11	Screw	G, P, R	412 50 27-01	Calibration stop	K
412 05 60-12	Screw M 4"6	P, R	412 50 31-01	Rack compl.	K
412 15 27-01	Cog wheel	P	412 50 34-01	Presser bar lifter	K
412 15 78-01	Cord device 220 V	N	412 50 41-01	Spring	K
412 15 79-03	Cord device 120 V	N	412 50 42-01	Connecting Board, sewing head	K
			412 50 43-01	Lamp holder compl.	K
412 15 81-01	Cord device Australia	N	412 50 46-01	Wedge	K
412 15 88-01	Spring	N	412 50 47-01	Clamp ring	K
412 18 45-01	Foot	N	412 50 48-01	Clamp ring	K
412 19 53-01	Washer	F	412 50 52-01	Plate	K
412 21 14-03	Screw	K	412 50 55-01	Frame, lower	K
412 21 14-04	Screw	K	412 50 56-01	Step motor	K
412 21 14-08	Screw	K	412 50 60-01	Side feeding unit	F
412 21 14-14	Screw	C	412 50 63-01	Draw bar	F
412 21 14-20	Screw	G	412 50 84-01	Cog segment	F
412 22 98-01	Nut	H	412 50 85-01	Clamp	F
412 28 19-02	Screw	G, K	412 50 86-01	Draw bar	F
412 28 54-02	Presser bar	K	412 50 72-01	Spring	H
412 28 79-01	Screw	D	412 50 73-01	Eccentric	F
412 30 06-01	Driver	L	412 50 87-01	Spring	D
412 30 07-01	Spring	L	412 50 88-01	Damper	D
412 30 08-01	Pully	L			
412 30 09-02	Handwheel	L	412 50 89-01	Thread cutter gearbox	D
412 30 30-01	Guide arm	K	412 50 97-01	Slide	D
412 30 50-01	Foot	C	412 51 01-01	Thread hook	D
412 30 55-01	Rubber ring	B	412 51 05-01	Cover, thread cutter	D
412 30 66-01	Shaft	E	412 51 28-01	Step motor compl.	D
412 31 69-01	Spring	K	412 51 31-01	Cable, thread sensor compl	D
412 31 60-49	Pin	R	412 51 33-01	Bobbin holder	D
412 31 79-01	Clutch	L	412 51 34-01	Bobbin hatch	D
412 31 81-01	Clamp	I	412 51 38-01	Feed unit	G
412 31 84-01	Bushing, feed dog	G	412 51 37-01	Guide compl. With carriage	G
412 32 27-04	Bobbin winding unit	B	412 51 43-01	Block, guide	G
412 32 33-02	Sealing washer	B	412 51 44-01	Feed carriage	G
412 32 34-08	Step motor compl. Z-Z	K	412 51 49-01	Spring	G
412 32 34-09	Step motor compl. Feeding	H	412 51 60-01	Feed dog compl.	G
412 33 62-01	Cog wheel	K	412 51 51-01	Feed dog	G
412 32 84-01	Clamp	L	412 51 53-01	Spring	G
412 33 75-01	Spring	F	412 51 54-01	Lever, Feed lift	G
412 33 93-01	Attachment, motor	C	412 51 55-01	Spring	G
412 33 94-01	Muffler, motor	C	412 51 58-01	Stop ring	I
412 33 97-01	Motor	C	412 51 63-01	Worm gear	C
412 34 26-01	Spring	B	412 51 64-01	Holder, stopright card	I
412 34 50-01	Eccentric	B	412 51 68-01	Lower shaft	I
412 34 51-01	Adjusting arm	L	412 51 69-01	Eccentric feed	I
412 34 54-01	Cog belt, motor	I	412 51 70-01	Distance	O
412 34 60-01	Stop ring	H	412 51 78-01	Accessory box	S
412 34 81-01	Spring	H	412 51 78-01	Embroidery box compl.	M
412 34 82-01	Screw	H	412 51 89-01	Nut	M
412 34 85-01	Joint cross	H	412 51 90-01	Housing, Thread tension	M
412 34 88-01	Fastener	H	412 51 91-01	Sensor	M
412 34 96-01	Cablage, motor	C	412 51 92-01	Spring	M
412 34 97-02	Cablage for PC Board	C	412 51 94-01	Adjusting sleeve	M
412 35 28-01	Washer	I	412 51 95-01	Push buttons	M
412 35 33-02	Driving wheel compl.	I	412 51 97-01	Thread tension cover, replaced by	M
412 35 42-01	Pully	B	412 65 55-01	Thread guide	A
412 35 62-01	Pin	L	412 51 98-01	Sealing	A
412 36 53-03	Arm shaft compl.	L	412 52 01-01	Holder	A
412 36 84-01	Cog belt	L	412 52 03-01	Lamp comp.	A
412 36 87-01	Pin	A	412 52 05-01	Lamp guard	A
412 37 11-01	Thread real disc (big)	A	412 52 08-01	Thread holder	A
412 37 11-02	Thread real disc (small)	A	412 52 09-01	Reel pin	A
412 37 82-01	Nut	G	412 52 10-01	Thread guide, replaced by	A
412 38 42-02	Cog wheel	P, R	412 52 13-01	412 65 55-01	A
412 38 43-01	Washer	O	412 52 14-01	Spring	M
412 39 09-14	Plastic bag with acc.	E	412 52 15-01	Heat protector	A
412 39 47-01	Washer, hook	S	412 52 16-01	Door, front cover	A
412 39 90-01	Nut	K	412 52 20-01	Hinge	A
412 40 97-01	Screw	K	412 52 21-01	Spring	A
412 41 12-02	Ankel	A, B, D	412 52 23-01	Bushing	B
412 42 37-01	Knife	E	412 52 25-01	Back cover, upper	B
412 44 40-02	Hook	E	412 52 28-01	Handle	B
412 44 44-01	Gear	S	412 52 28-01	Back cover, free arm	B
412 44 68-01	Screw	S	412 52 30-01	Cover plate, embroidery	B

Part No	Description	Page	Part No	Description	Page
4125233-01	Base plate, cover	C	4125775-03	Cable holder	C
4125234-01	Base plate	C	4125778-01	ESD-cable	H
4125240-01	Step motor Y-unit compl	R	4125797-01	Grip 100x100	S
4125246-01	Cog wheel, large	P, R	4125818-01	Protector, floppy	A
4125242-01	Cable, embroidery unit	P	4125825-01	Screw	K
4125248-01	Holder, X-cog belt	P	4125899-01	Distance	B
4125249-01	Adjuster, belt tension	P	4125900-01	Cover Ver 1, replaced by	
4125252-01	Bearing, Ver 1, replaced by		4126286-01	Cover Ver 2, Gray	R
	4126610-01	P			
4125253-01	Holder, Y-cog belt	R	4125901-01	Cog wheel	M
4125254-01	Sensor Ver 1, Black replaced by		4125911-01	Cable	K
	4126286-01	R	4125978-01	ESD-spring	C
4125254-02	Sensor Ver 2, Gray	R	4126001-01	Needle bar frame	K
4125255-01	Cog belt, Y-unit	P			
			4126002-01	Sewing head	K
4125256-01	Shaft ver 1 replaced by		4126003-01	Thread take up	K
	4126610-01	P	4126004-01	Hook cover	D
4125261-01	Circuit board	R	4126005-01	Thread tension unit, Original ver.	M
4125264-01	Frame Y-unit Ver 1, replaced by		4126005-02	Thread tension unit, Lay in ver.	M
	4126286-01	R	4126006-01	Washer set, thread tension	M
4125264-02	Frame Y-unit Ver 2, Mega Hoop	R	4126010-01	Distance, step motor	M
4125265-01	Button Ver 1, Black replaced by		4126011-01	Distance, thread brake	M
	4126286-01	R	4126017-01	Thread brake, inner	M
4125265-02	Button Ver 2, Gray	R	4126018-01	Thread brake, outer	M
4125269-01	Spring	R	4126071-01	Embroidery disks	S
4125267-01	Cog belt	R	4126131-01	Spring	M
4125269-01	Shaft Ver 1, replaced by		4126132-01	Heat protector,	A
			4126133-01	Lever	M
4126288-01		R	4126139-01	Thread tension cover, replaced by	
4125271-01	Embroidery hoop 150x240	S	4126286-01		A, M
4125274-01	Embroidery hoop 100X100	S	4126141-01	Front cover	A
4125277-01	Upper cover, X-unit	P	4126142-01	LCD	A
4125278-01	Lower cover, X-unit	P	4126192-01	Frame Ver 2, Mega Hoop	R
4125279-01	Cover, Y-unit	R			
4125280-01	Step motor cover, Y-unit	P	4126288-01	Mega hoop re-built kit	R
			4126288-01	X-shaft Ver 2, Mega Hoop	R
4125283-01	Locker, Embroidery unit	P	4126289-01	Y-shaft Ver 2, Mega Hoop	P
4125284-01	Spring	P	4126290-01	Bearing Ver 2, Mega Hoop	P
4125285-01	Guide rail	P	4126555-01	Lay-in thread tension kit	A
4125292-01	Cover	O	4126610-01	X-shaft re-built kit	P
4125297-01	Friction tape	P	7214168-70	Pin	H
4125303-01	Screen	I	7214187-70	Pin	I, L
4125330-01	Slitch plate	D	7214210-10	Pin	I
4125333-01	Push buttons	A	7241189-01	Screw	A
4125334-01	Guide, real pin	A	7255220-05	Screw M3*6	H
4125336-01	Link	A	7255228-05	Screw	K
4125337-01	Knob, feed dog lowering	A	7255285-05	Screw	K
4125374-01	Embroidery templet 100x100	S	7285217-05	Screw	F, H, M, K
4125375-01	Embroidery templet 150x240	S	7285218-05	Screw	K
4125378-01	Cable, floppy	A	7285222-05	Screw M3*8	K
4125380-01	Cable, display	A			
			7285283-05	Screw M4*4	G
4125380-02	Cable, lamp transformer	A	7285285-05	Screw	K
4125402-01	Feeding unit	H	7285287-05	Screw M4*8	E
4125406-01	Calibration stop	H	7286283-05	Screw	I, L
4125407-01	Damper	H	7285320-05	Screw	L
4125408-01	Cog wheel	H	7287320-01	Screw	L
4125410-01	Shaft	H	7287384-05	Screw 6*10 mm	C
4125448-01	Thread guide	A, M	7341112-71	Washer	D
4125452-01	Cog segment	D	7341125-41	Washer	K
4125453-01	Lever	D	7352138-01	Washer	C
4125454-01	Felcher	D	7353105-00	C-Washer	M
4125455-01	Knife slide	D	7353108-20	C-Washer	E, P, R
4125456-01	Spring	C	7353110-20	C-Washer	P, R
4125464-01	Calibration lever	P, R	7355823-00	Washer	M
4125465-01	Holder	R	7355835-00	Locking washer	A
4125466-01	Pin, feed dog lowering	P			
4125467-01	Transformer compl.	A	7355855-00	Washer	L
			7356118-40	C-Washer	K
4125469-01	Cable, connection card, sewing head	C	7356113-40	Washer	D
4125469-02	Cable, connection card-left	A	7356136-40	C-washer	F, K
4125469-03	Cable, connection card-right	M	7356153-40	C-Washer	K
4125469-04	Cable, connection card, stop right	C			
4125496-01	Holder	A	ACCESSORIES		
4125497-01	Tap, thread guard	M	4015399-01	Buttonhole knife	O
4125498-01	Washer	M	4015555-01	Brush	O
4125501-01	Bobbin case compl.	E	4111732-01	Clearance plate	O
4125539-01	Card holder Ver 1, replaced by		4120838-47	Marking pen, neutral	O
	4126610-01	P	4125815-45	Bobbins (10)	O
4125540-01	Frame Ver 1, replaced by		4123814-01	Stitch plate opener	O
	4126286-01	R	4123815-01	Screw driver	O
4125542-01	Cable holder	A	4123977-01	Net	O
4125543-01	Cover, bobbin winding	A	4124477-01	Siccor	O
4125548-01	Step motor, thread tension	M	4124906-01	Templet pencil	O
			4125701-01	Sleeve, lamp	O
4125557-01	Spring	R	4126019-01	Guide	O
4125558-01	Holder	A			
4125562-01	Step motor	F	PRESSER FEET		
4125579-01	Thread guide	A	4117395-01	Edge guide G	O
4125580-01	Thread guide	A	4118530-01	Presser foot H	O
4125581-01	Washer	M	4120016-01	Presser foot, decorative stitches	
4125582-01	Cable	C	4120373-01	Presser foot A	O
4125583-01	Holder	R	4123465-01	Presser foot S	O
4125584-01	Damper	L	4123708-01	Quilting foot P	O
4125585-01	Connecting board	P	4123801-01	Presser foot B	O
4125588-01	Circuit board, stop right	C	4123802-01	Buttonhole foot C	O
4125613-01	Cutter, thread brake	D	4123804-01	Presser foot D	O
4125615-45	Bobbin 10 pack	E	4123805-01	Zipper foot E	O
4125618-01	Step motor comp.	P	4123806-01	Presser foot J	O
4125622-01	Cable holder, arm shaft	A	4124080-01	Button hole meter, comp.	O
4125631-01	Thread guide	A	4124337-01	Presser foot R	O
4125639-01	Cover, X-unit	P			
4125643-03	Transformer comp.	C			
4125654-01	Accessories, Embroidery	S			
4125665-01	Dust cover	E			
4125686-01	Adjusting washer	E			
4125697-01	Distance, back cover	B			

 
A

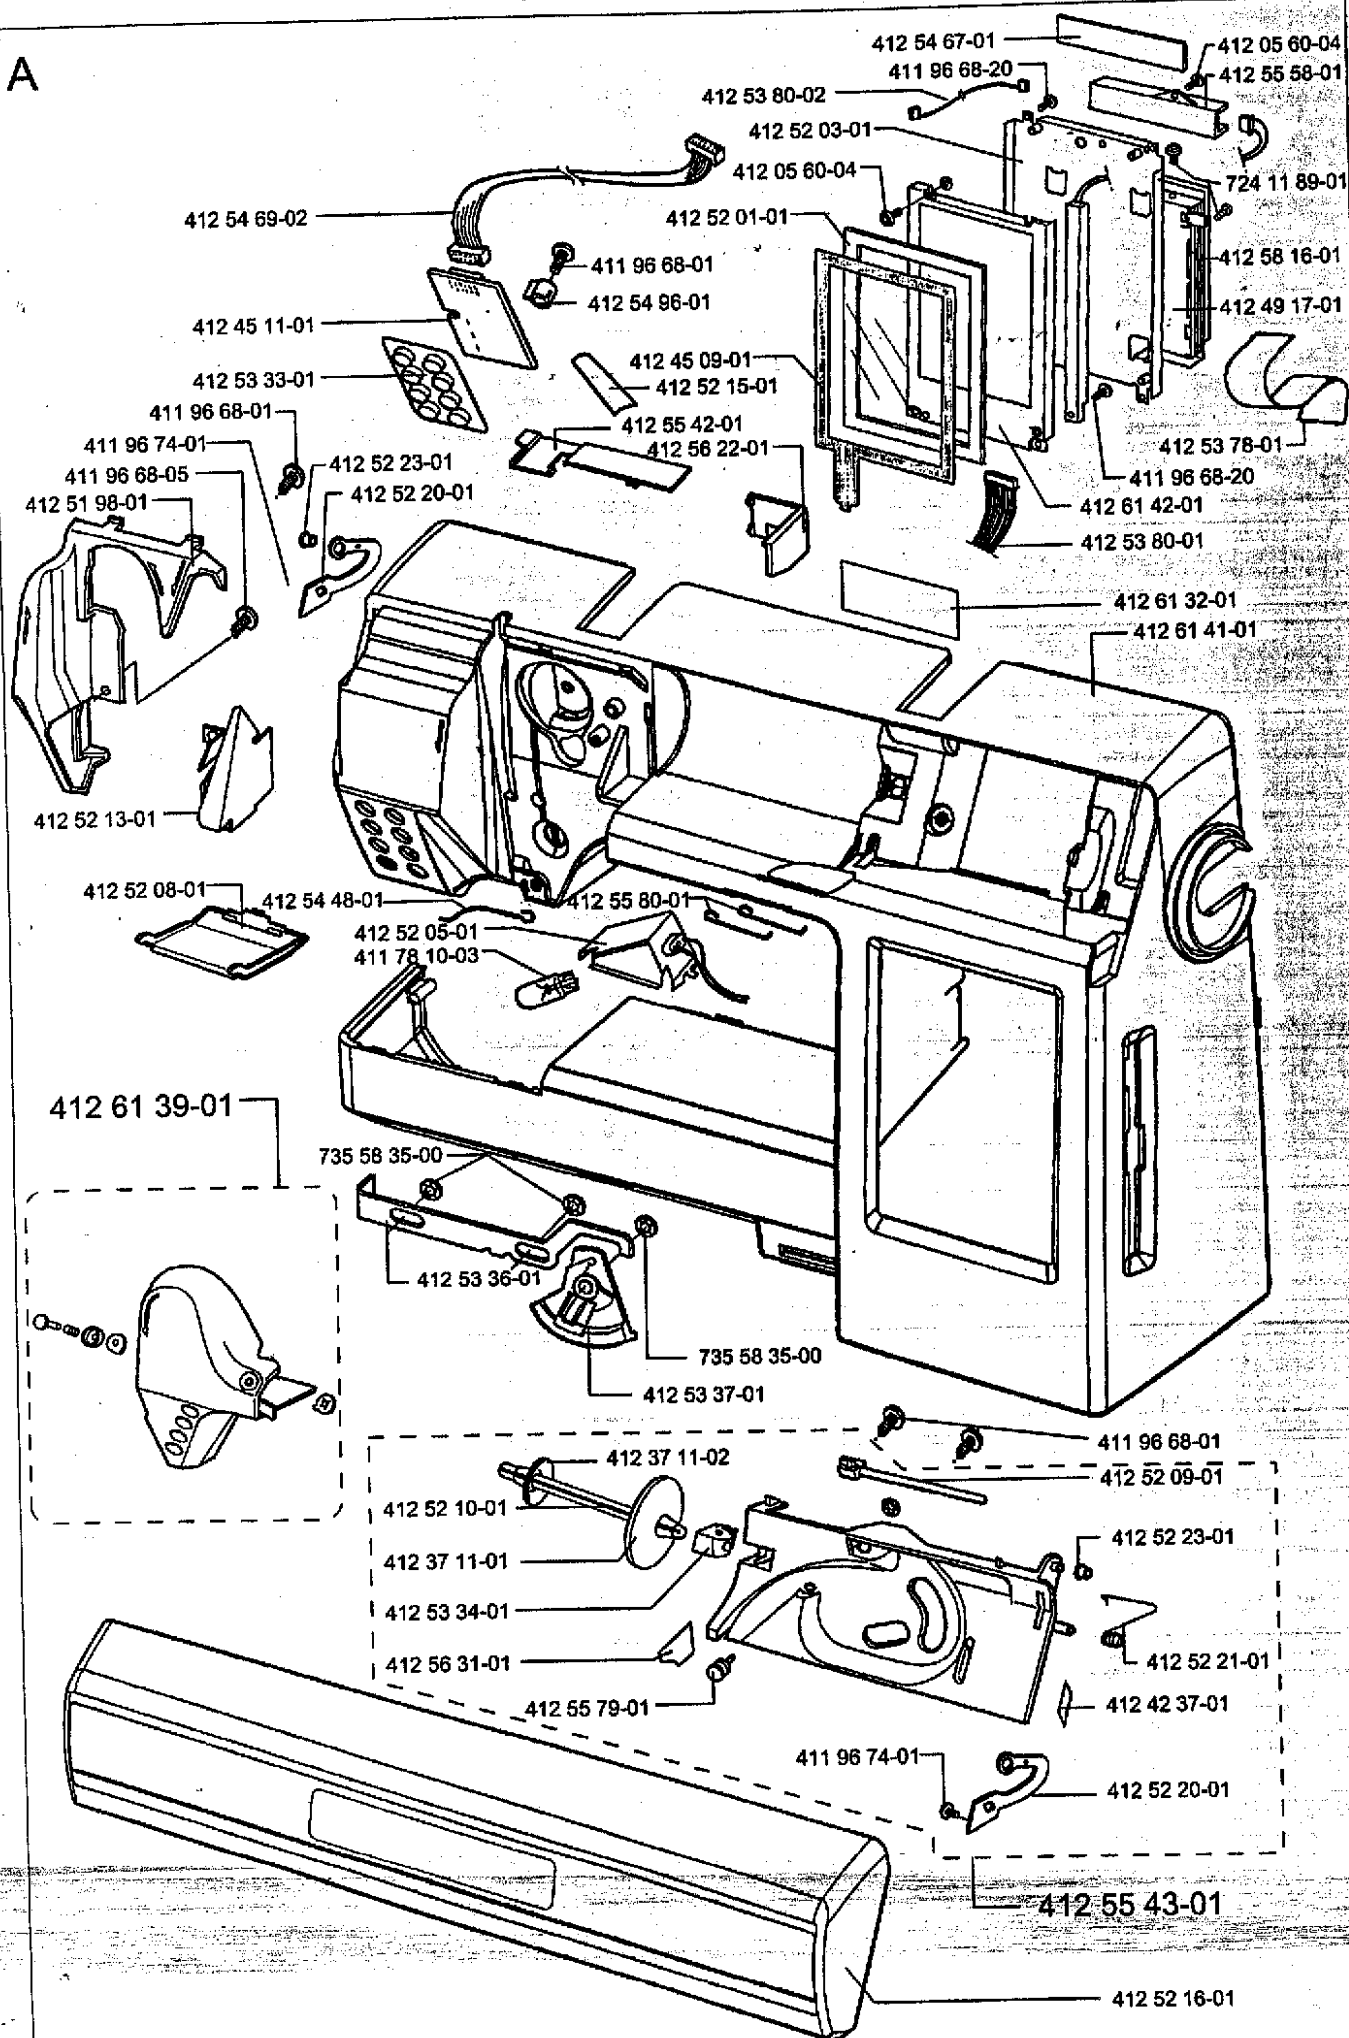


B

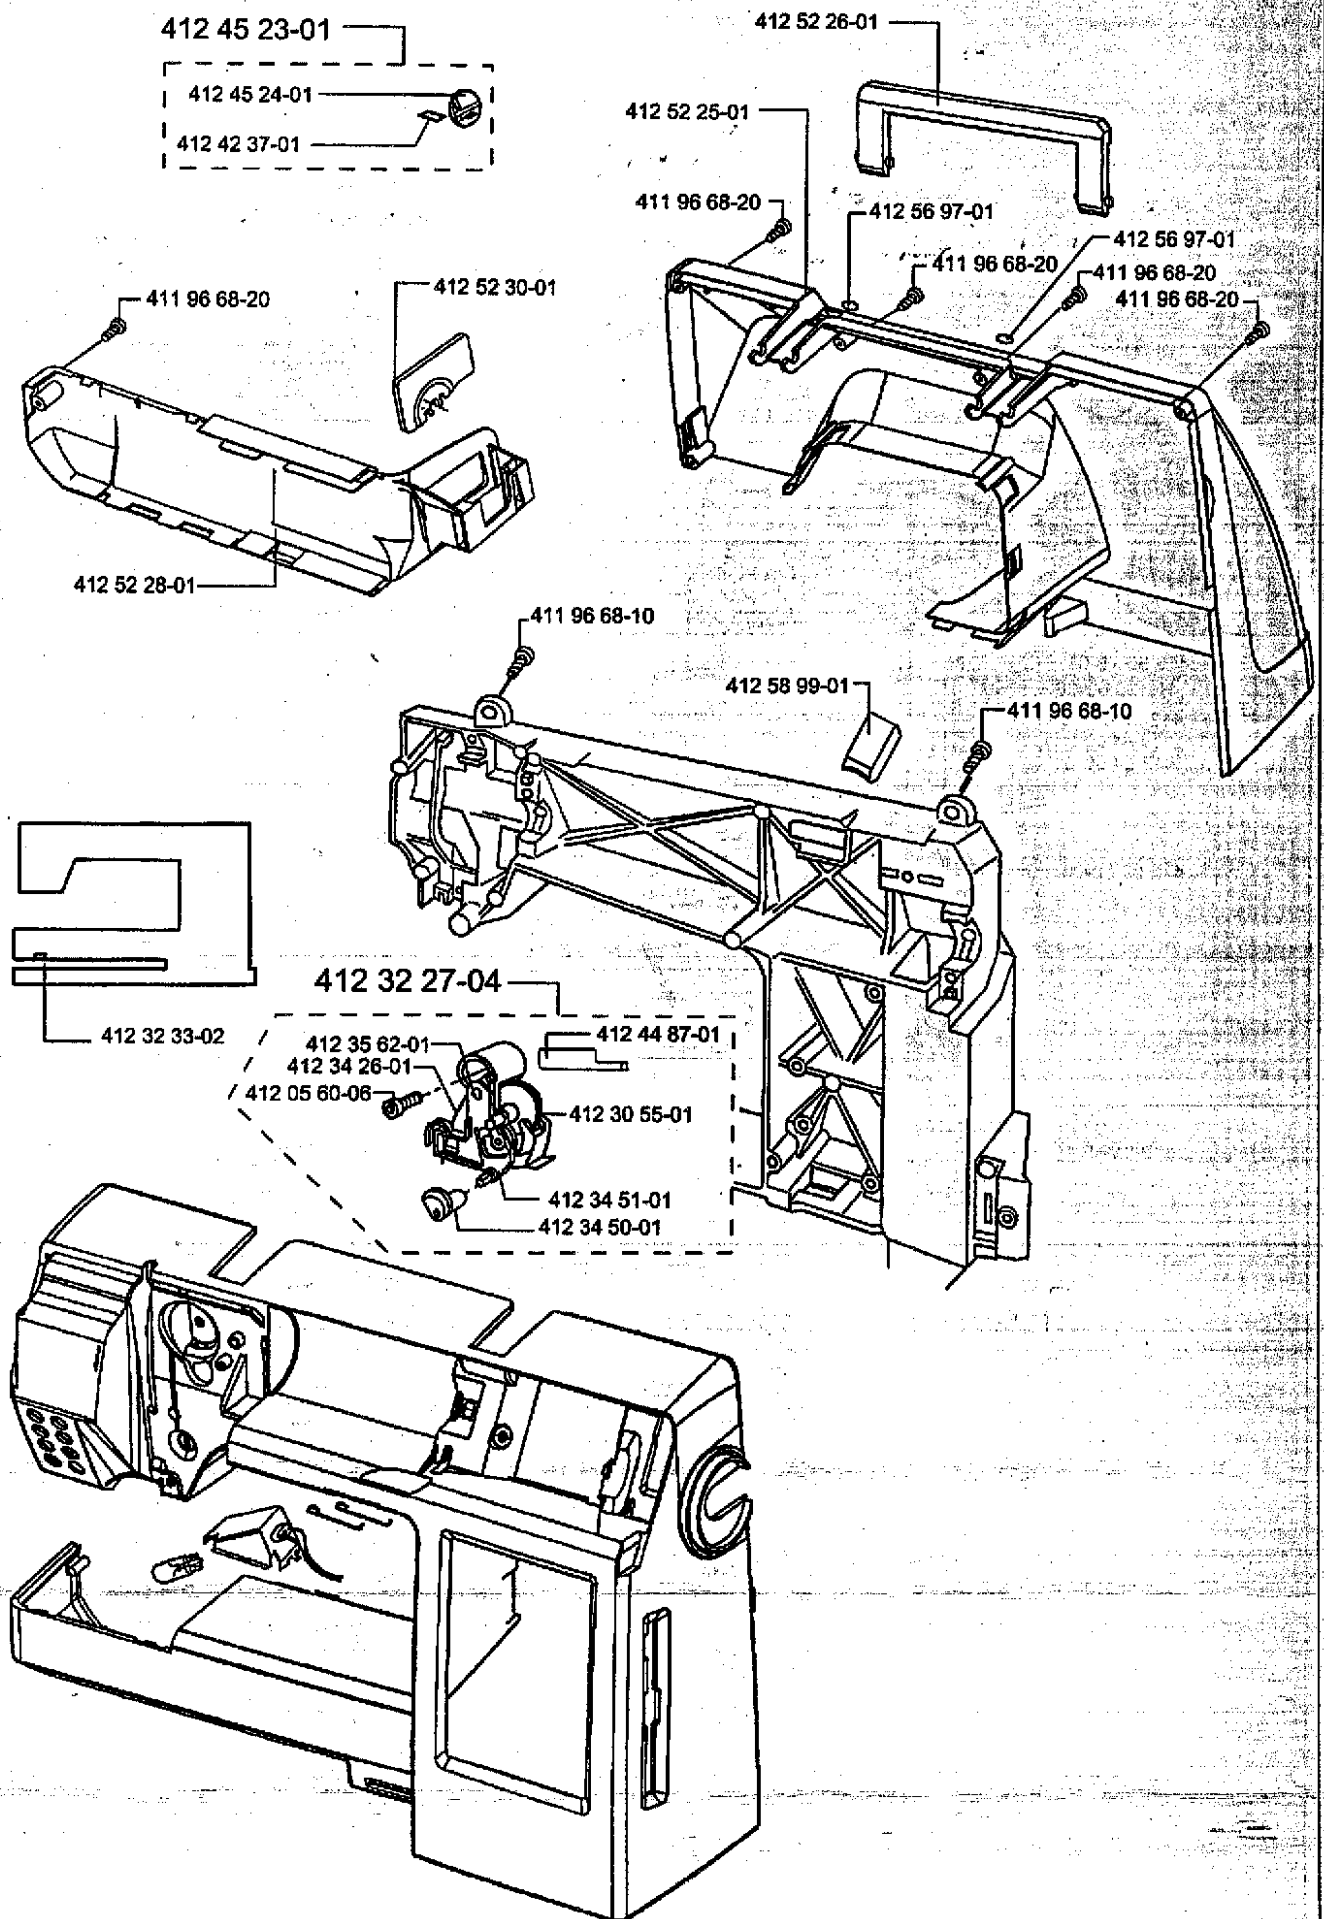 


C

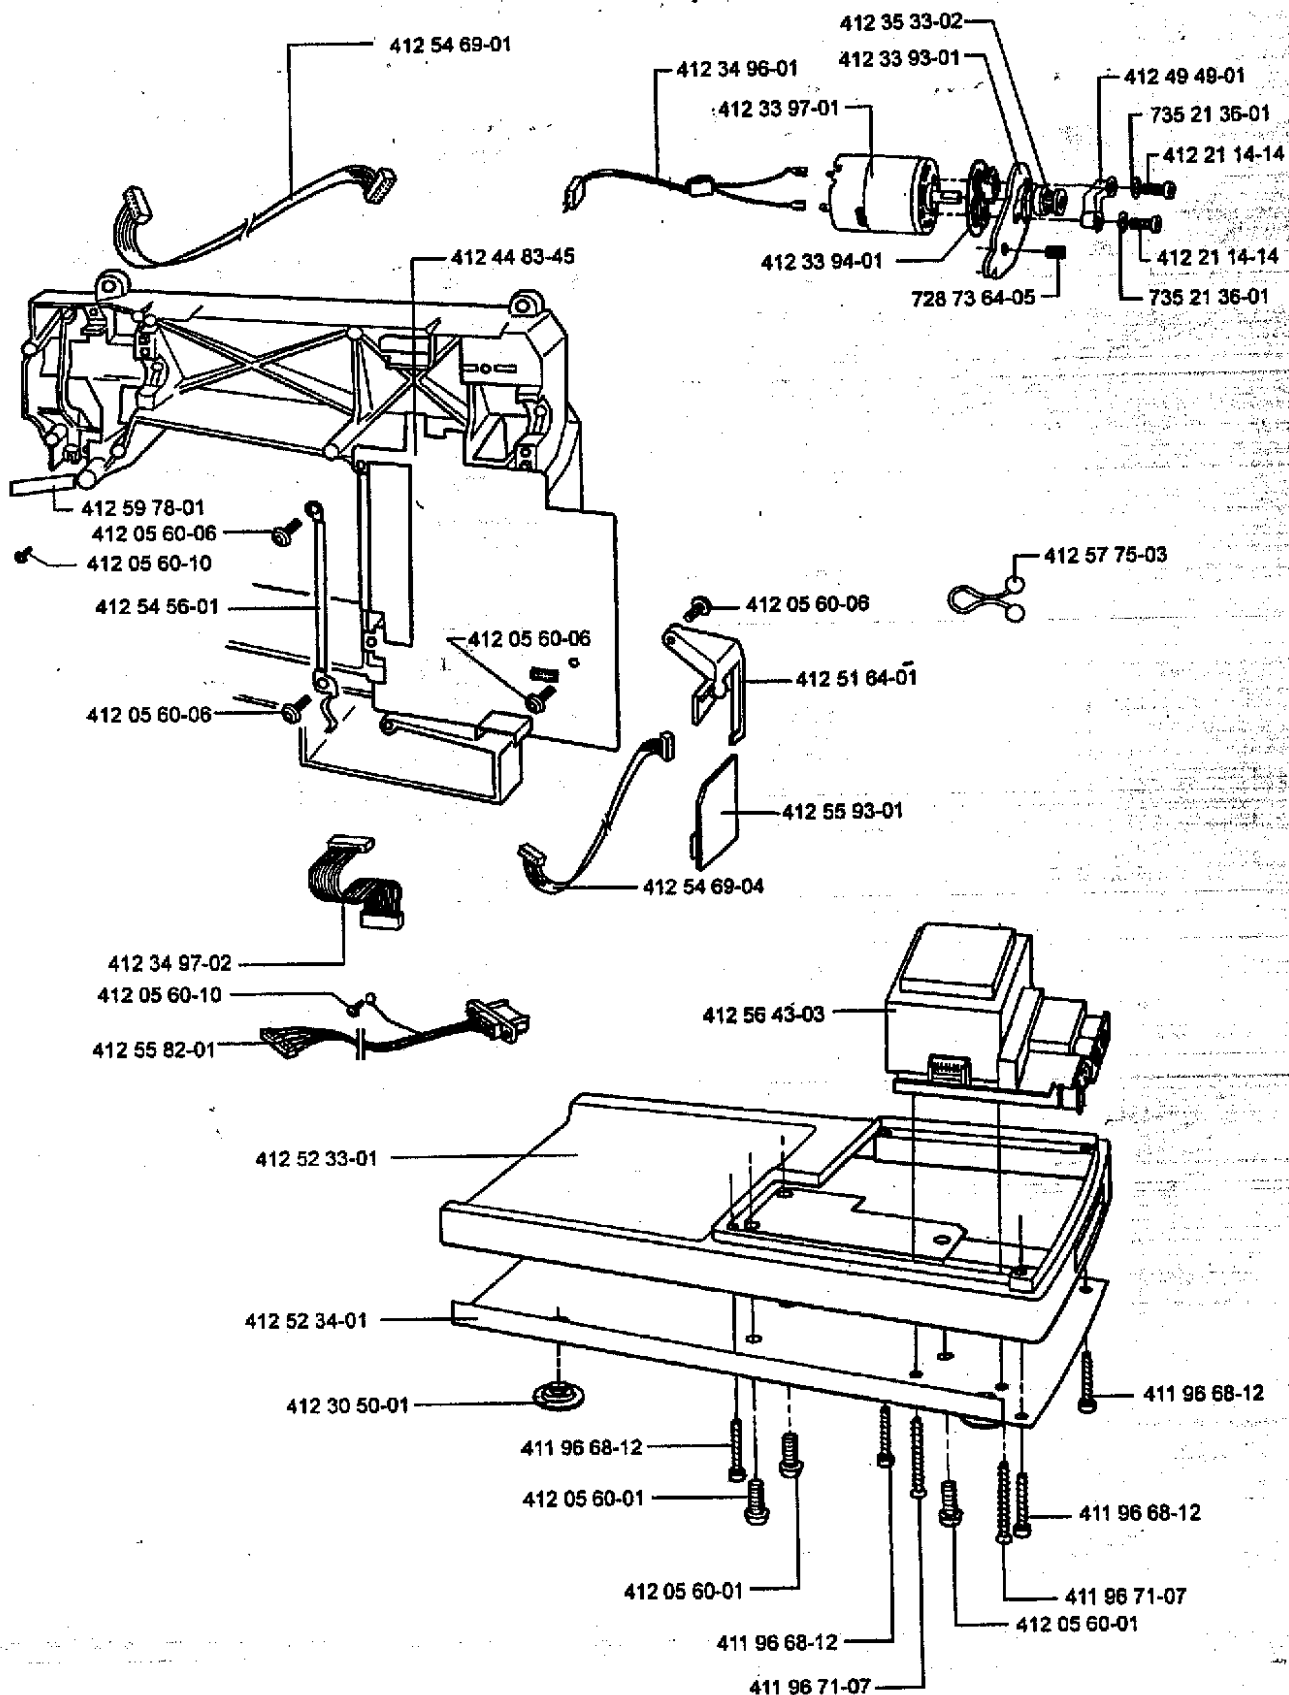 

D

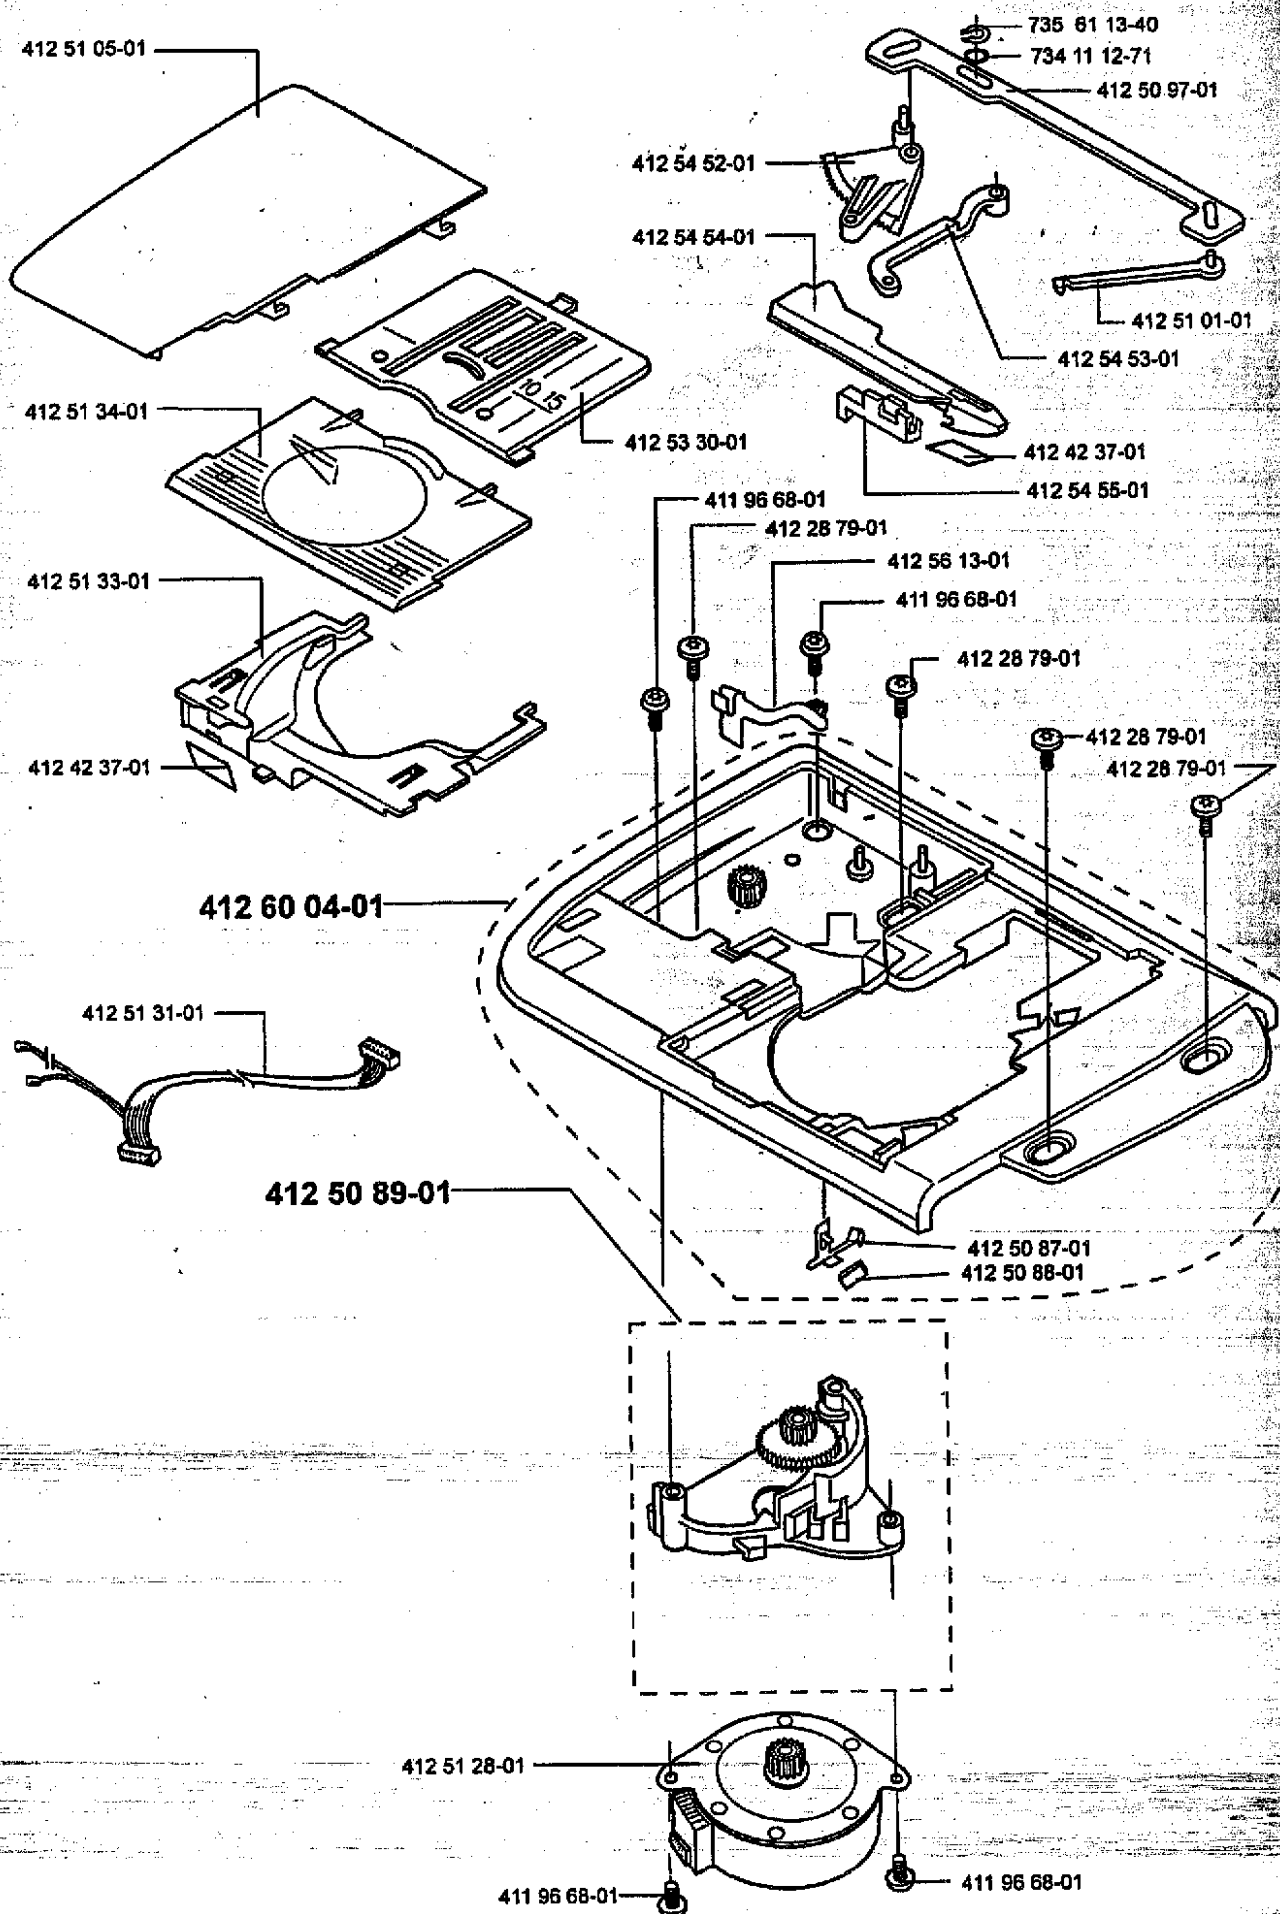 


E

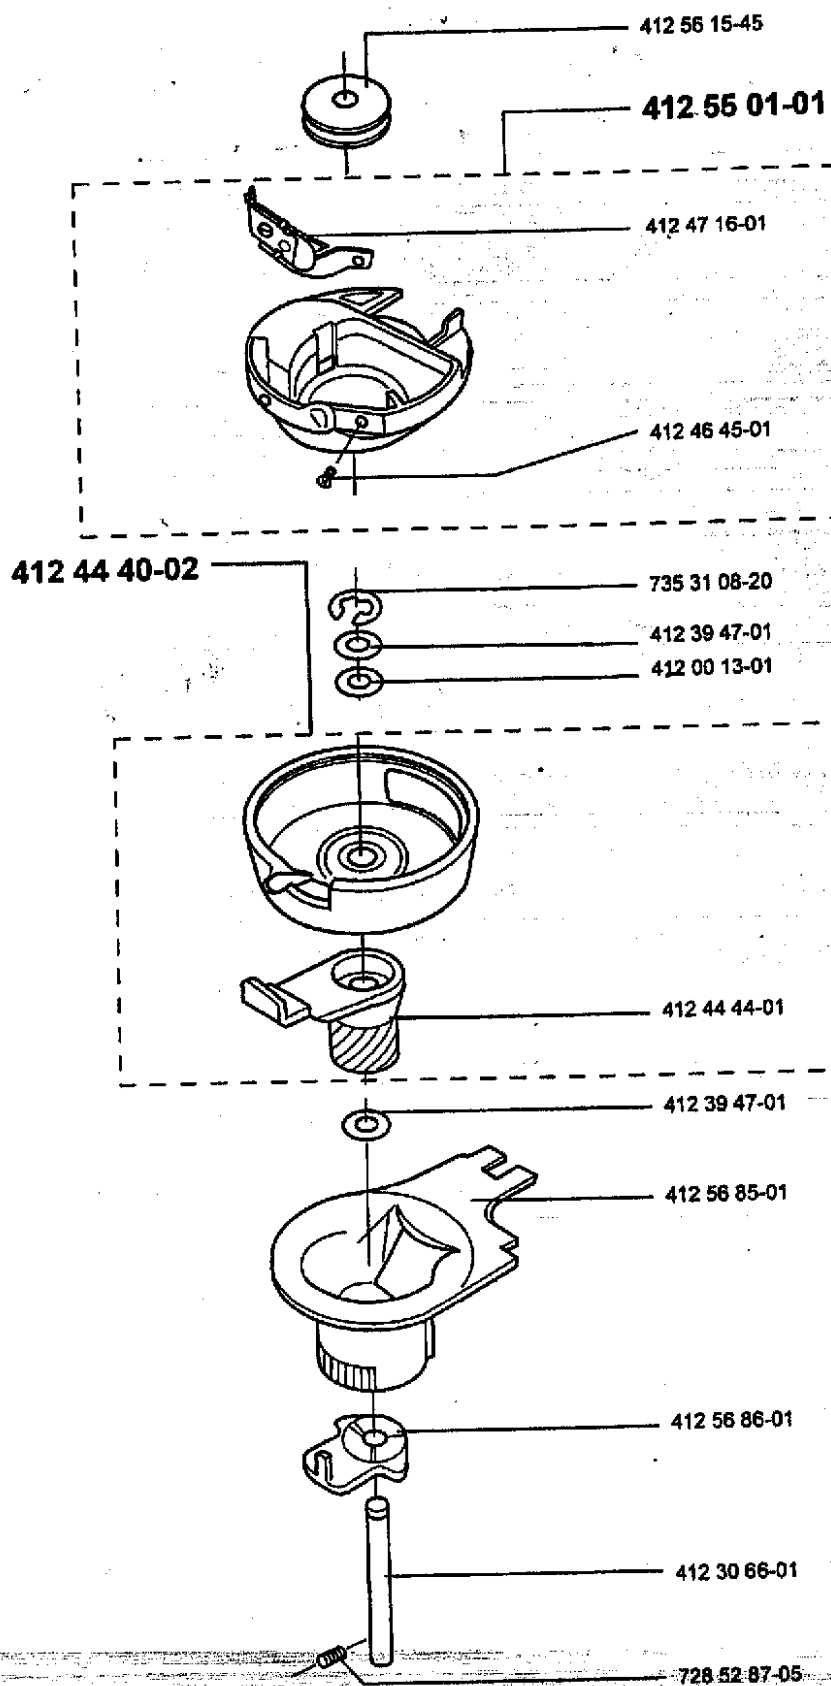 


412 50 60-01

 F

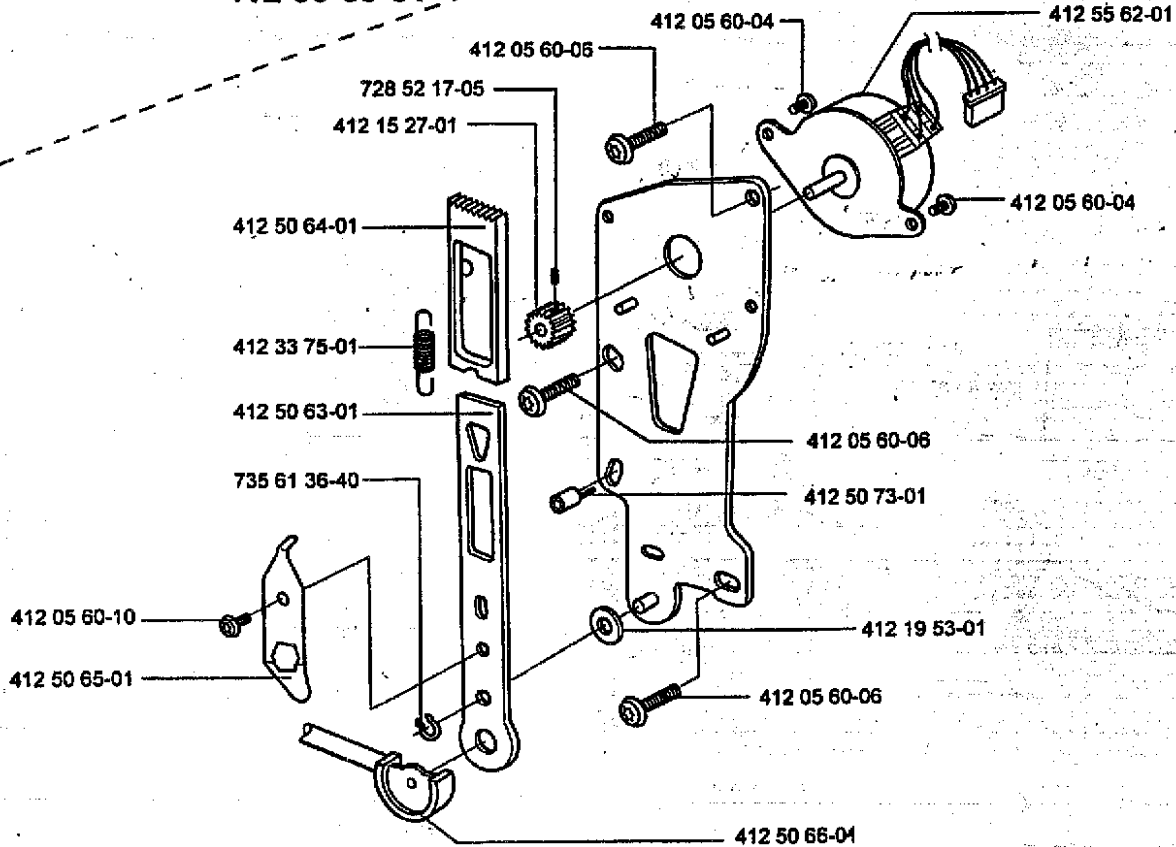


412 51 36-01



 
G

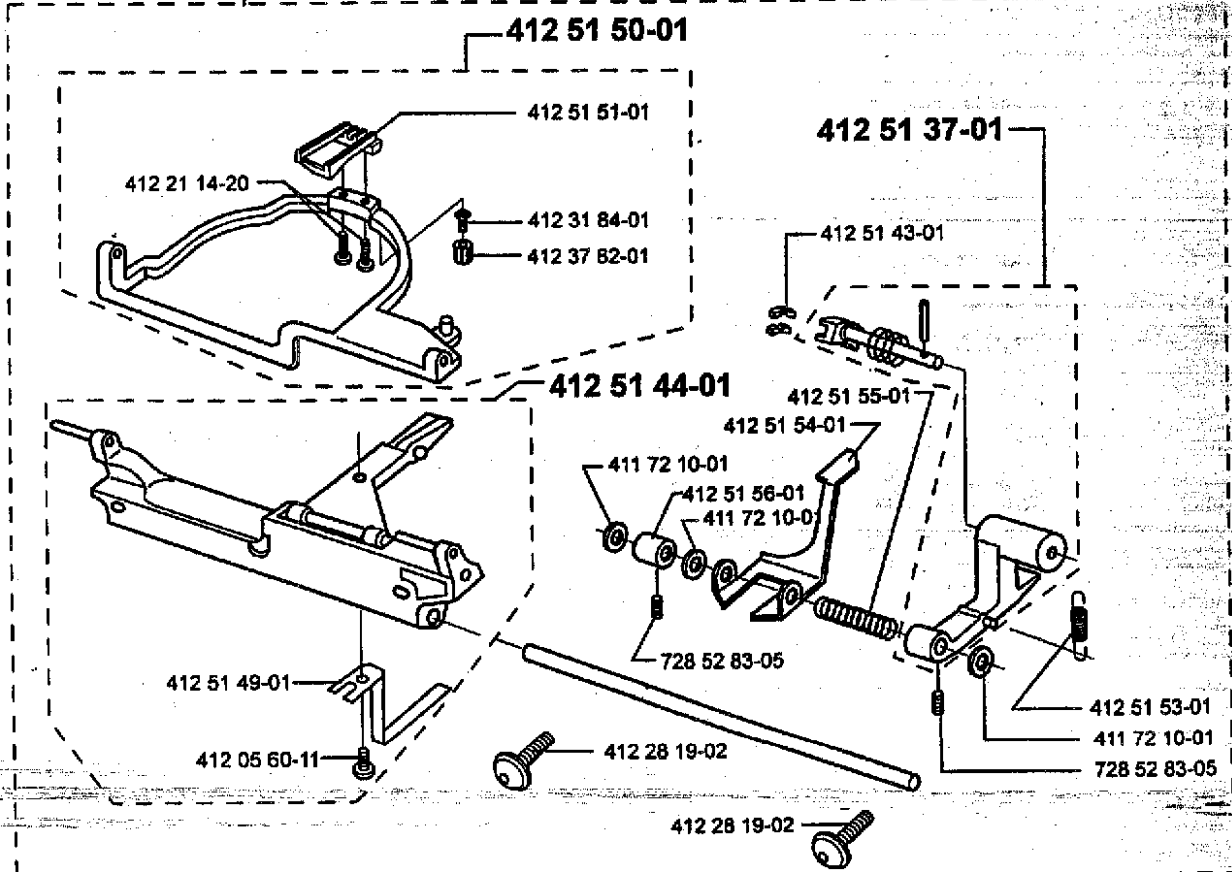

H

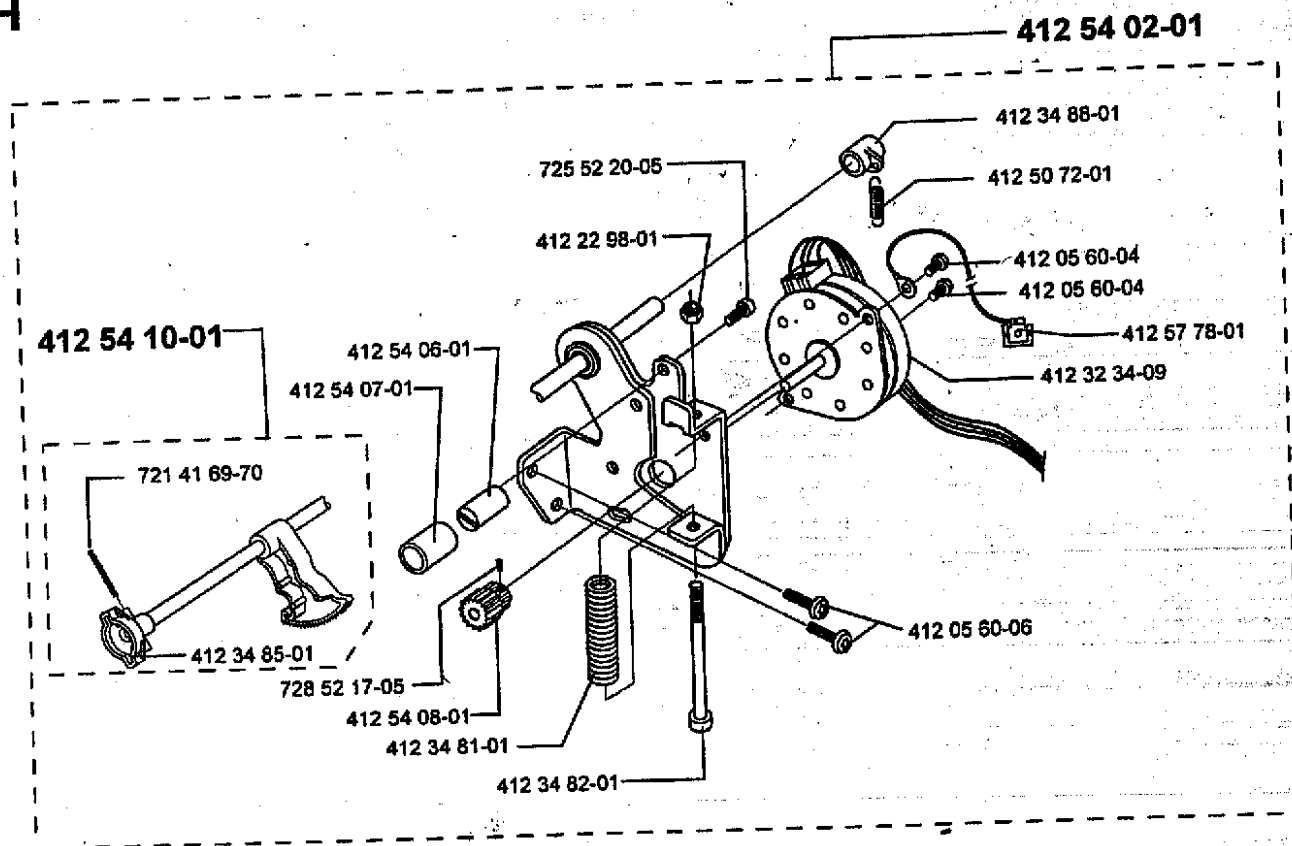 


I

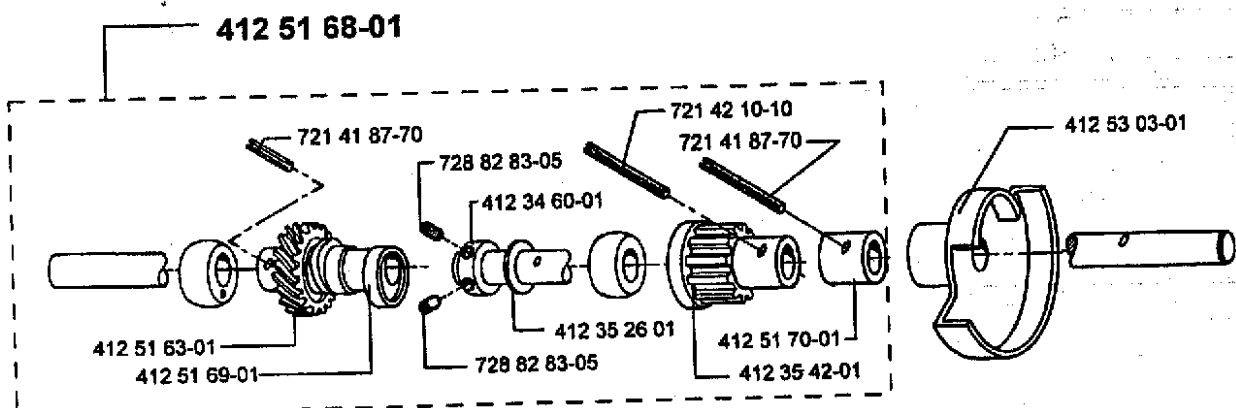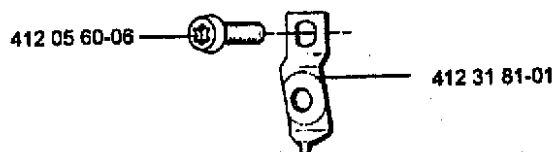   


K

 
412 60 02-01

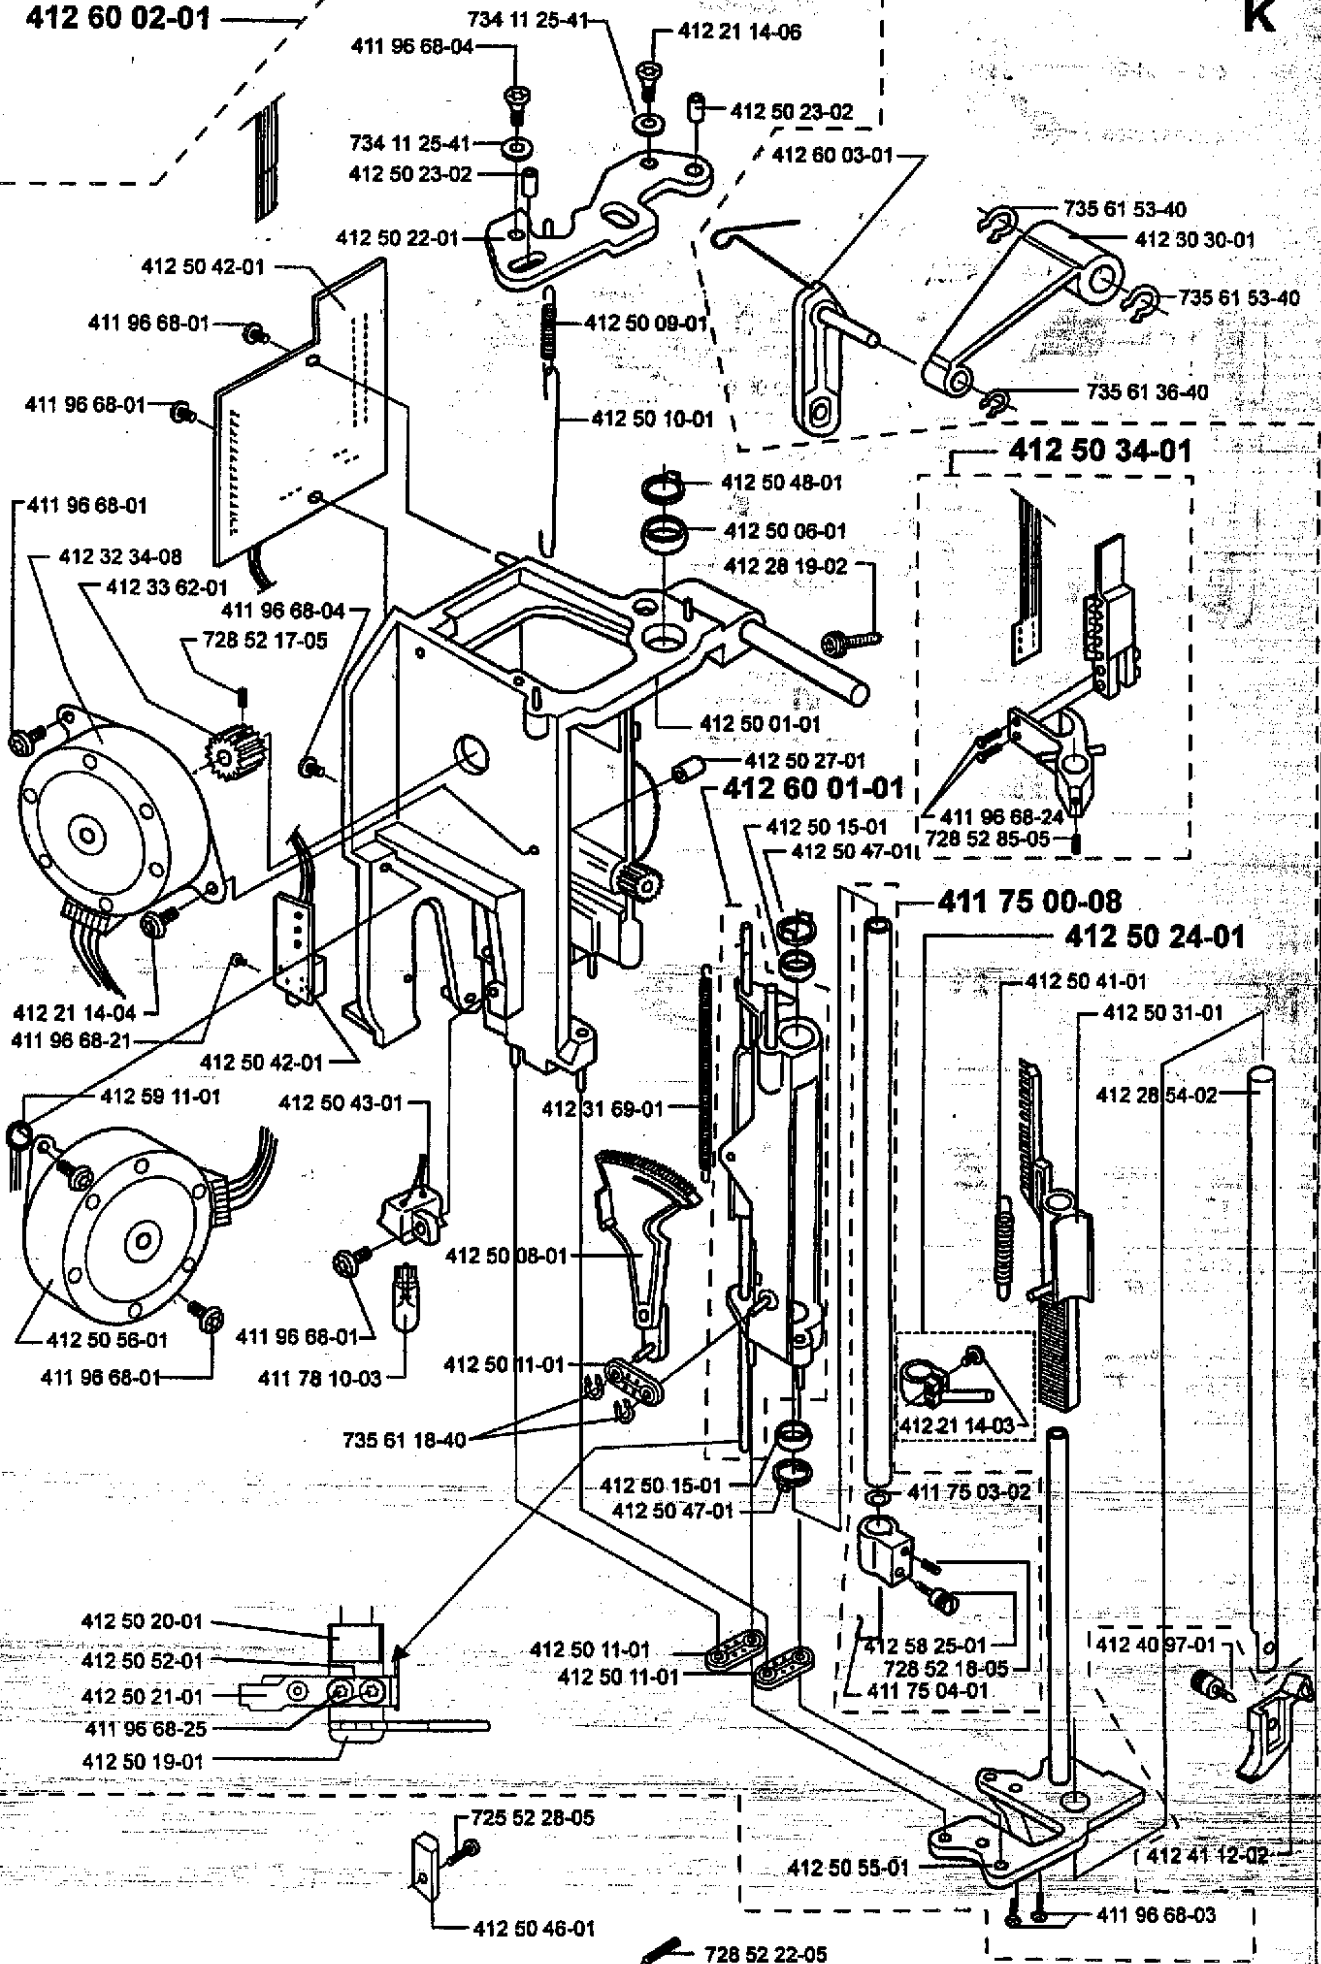

L


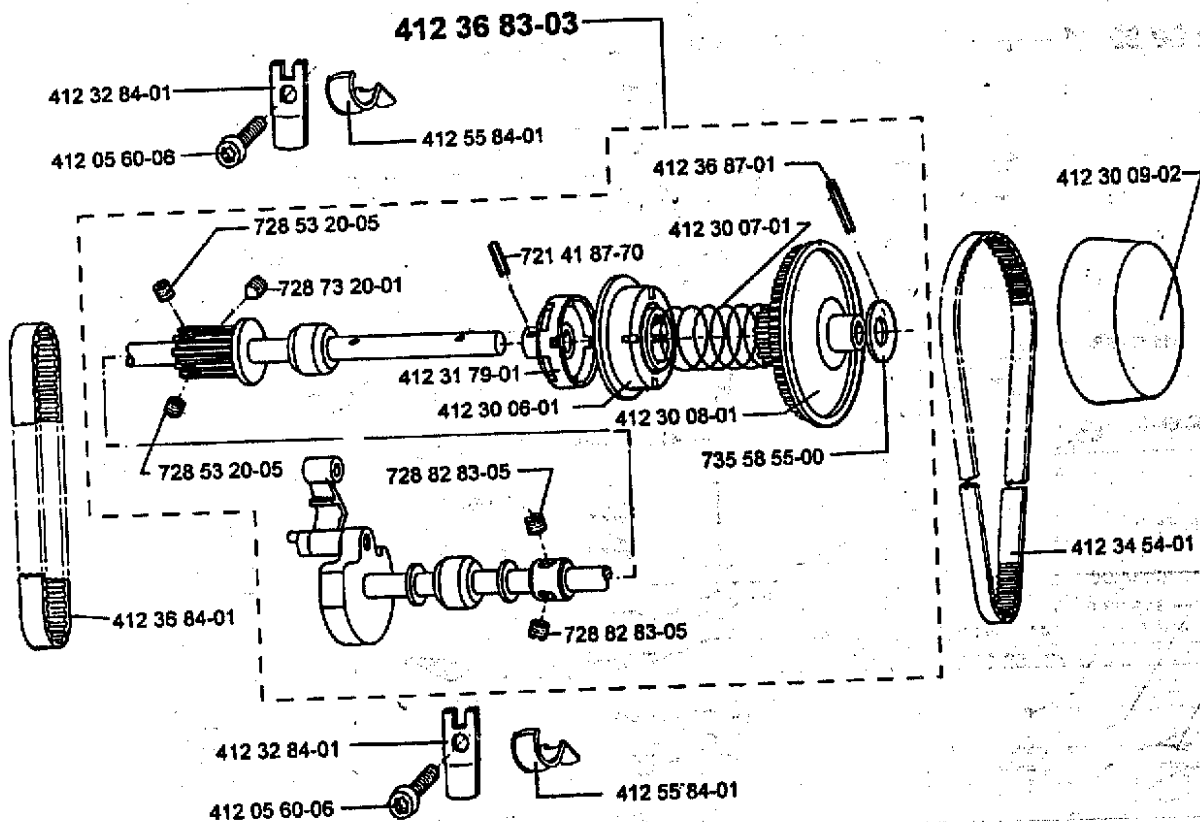 


M

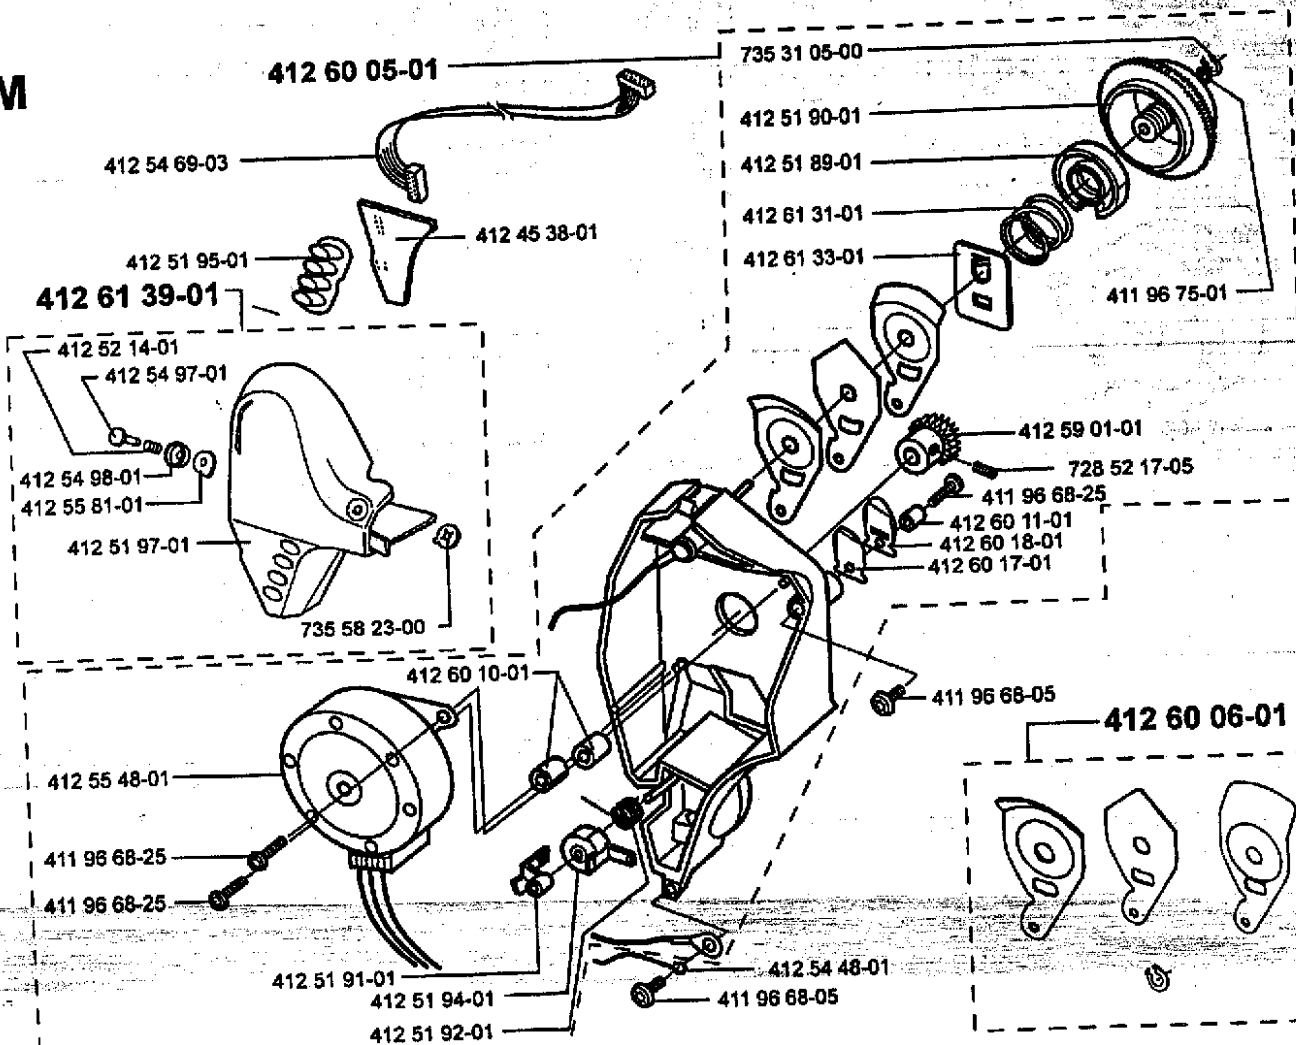 

N

 
 
412 49 25-01

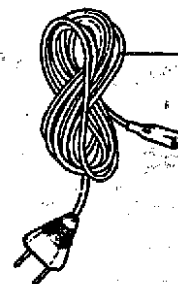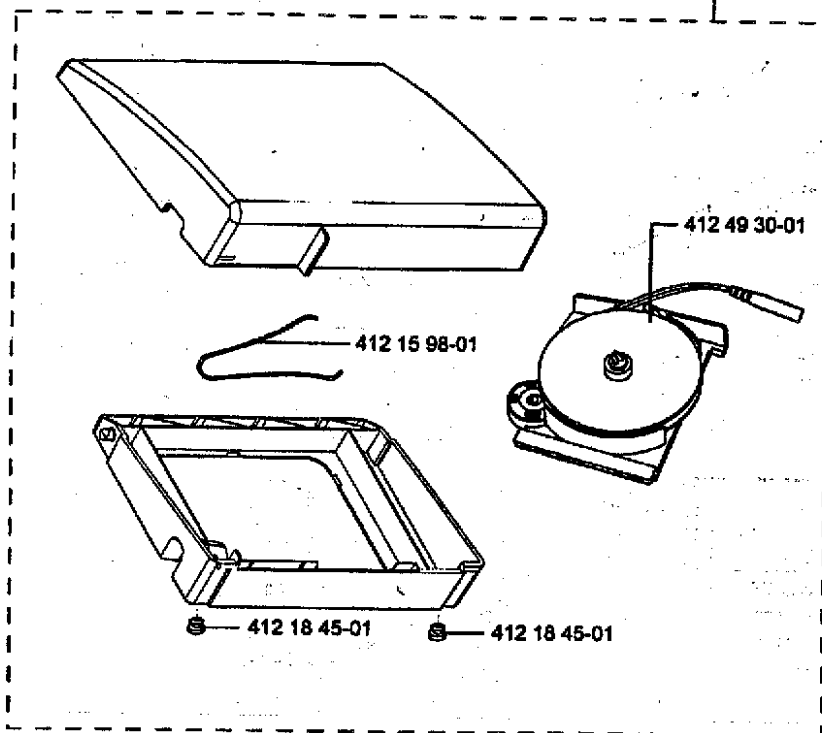


412 15 78-01 220 V
412 15 79-03 120 V
412 15 81-01 Australia

O

  
412 51 76-01

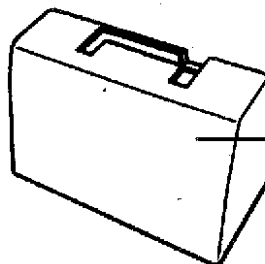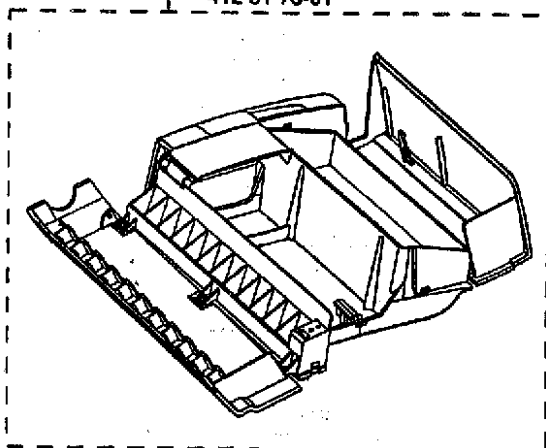

412 52 92-01

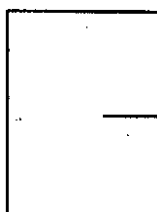 


 412 39 09-14
Bruch, bobbins,
Presserfeet etc

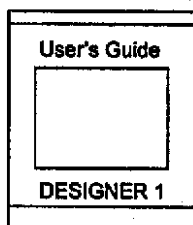


412 55 88-01 Users Guide Swe
412 55 88-06 Users Guide Den
412 55 88-11 Users Guide Fin
412 55 88-21 Users Guide Nor
412 55 88-26 Users Guide Eng
412 55 88-31 Users Guide Fra
412 55 88-36 Users Guide Dutch
412 55 88-41 Users Guide Ita
412 55 88-46 Users Guide Spa
412 55 88-51 Users Guide Ger
412 55 88-56 Users Guide Rus

 
P

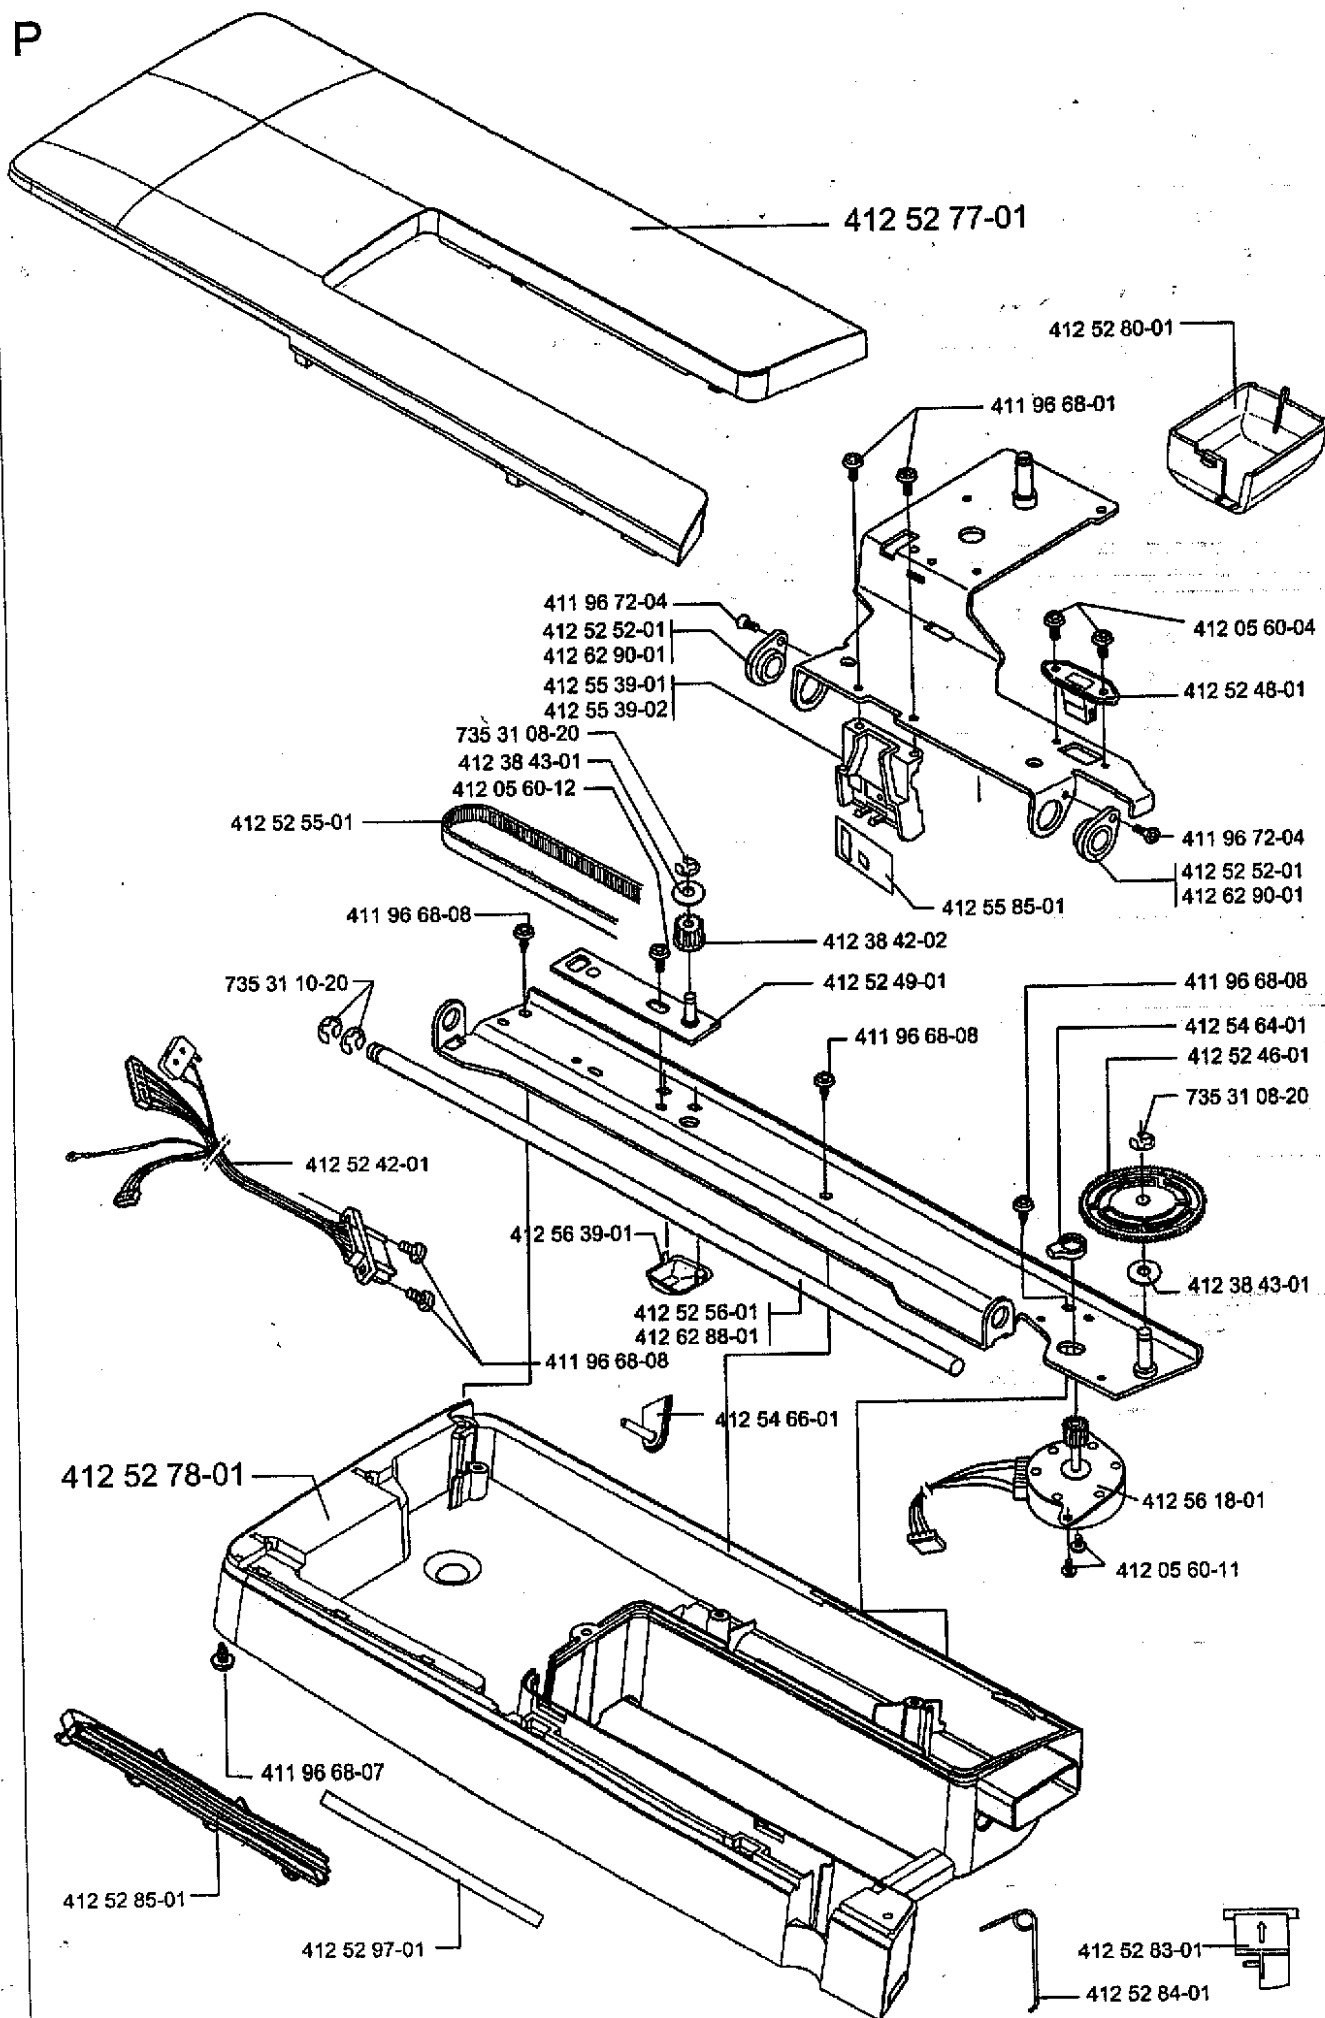


R

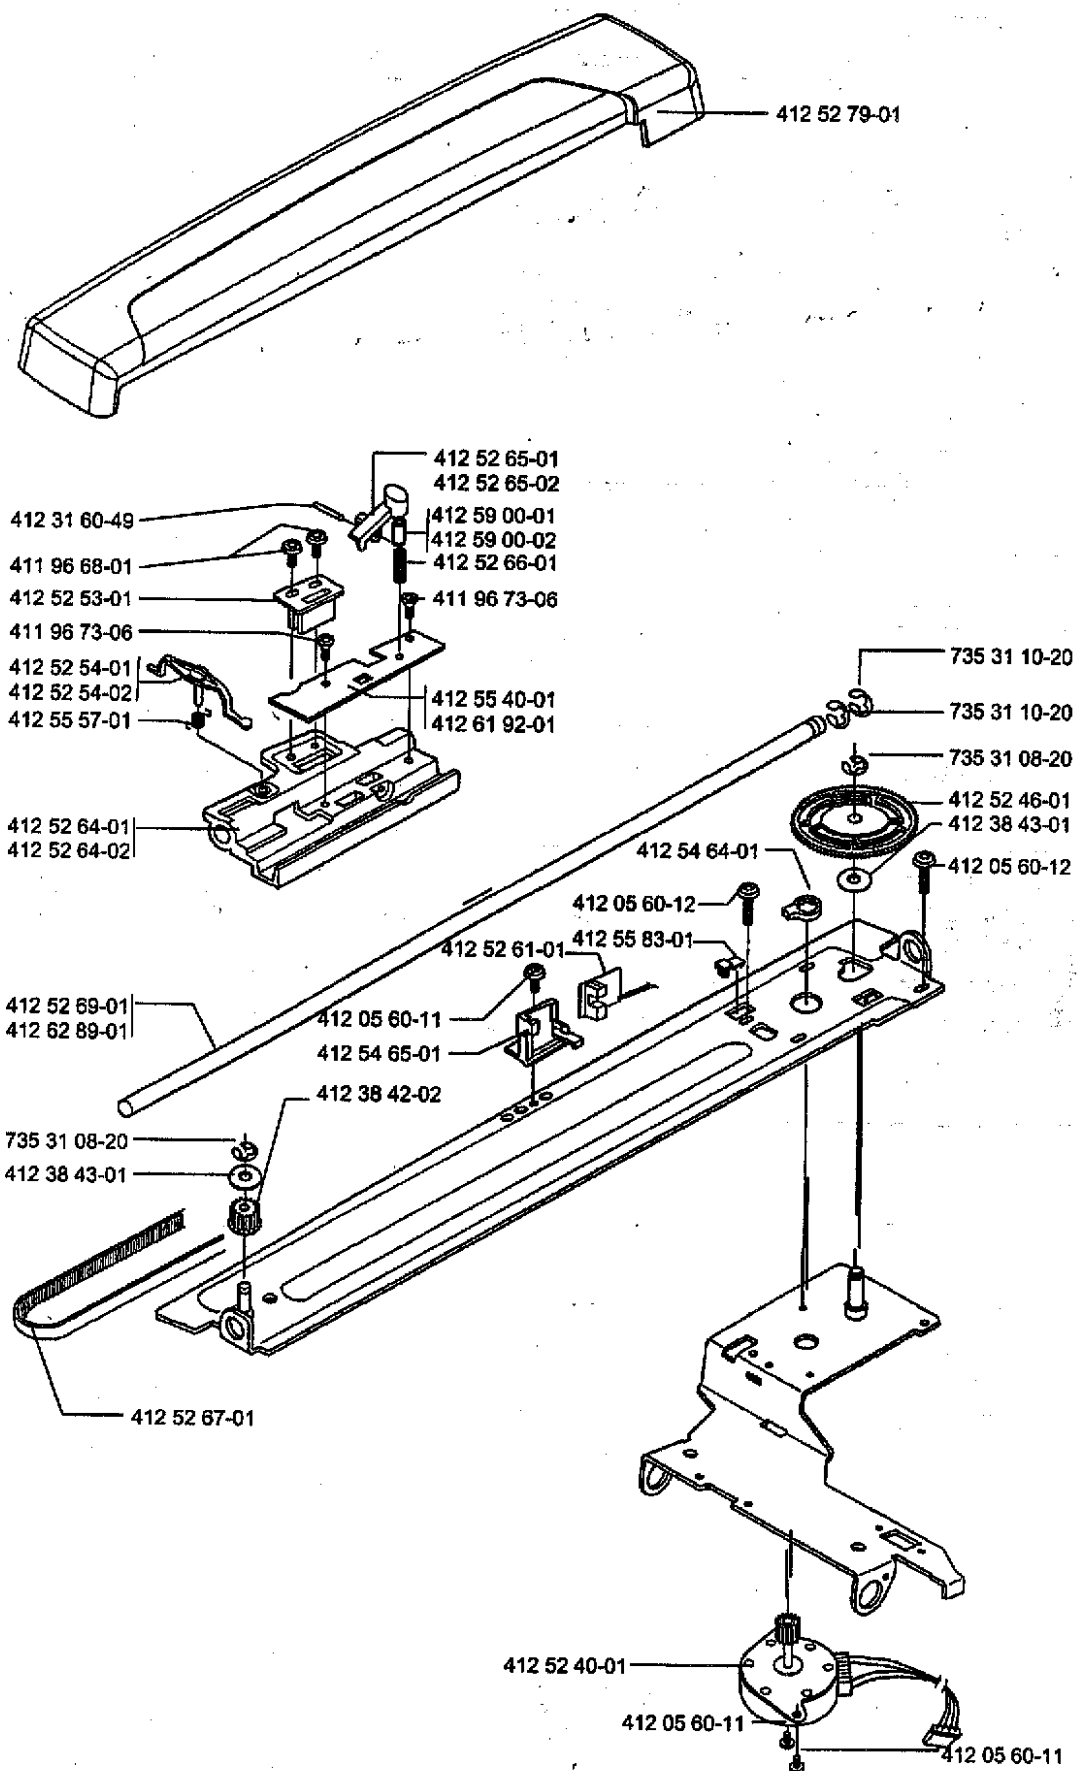 

S

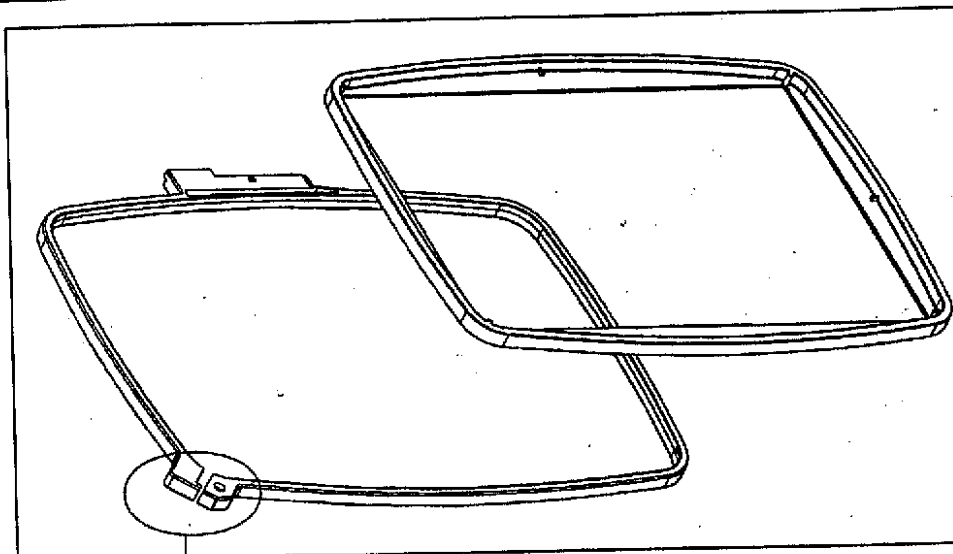 

412 52 71-01

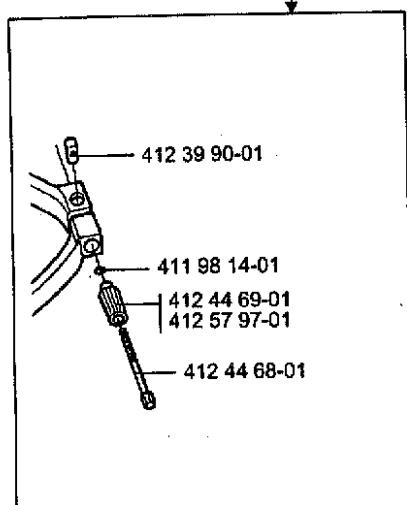 


412 39 90-01

411 98 14-01


412 44 69-01

412 57 97-01

 412 44 68-01

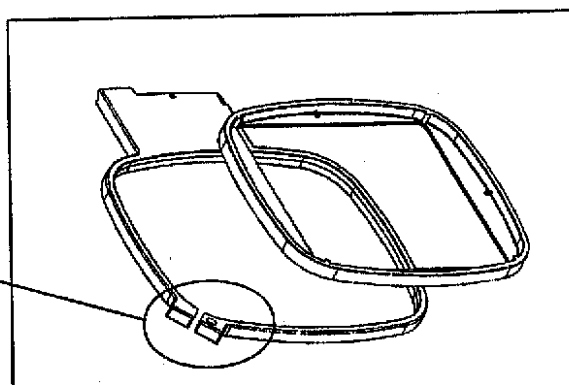

412 52 74-01

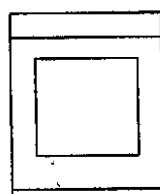 


412 53 73-01

Designer 1
Embroidery
100 Booklet



412 53 74-01

 Templet
100x100

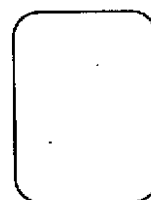


412 53 75-01

Templet
150x240




412 56 58-01

 Zipper bag

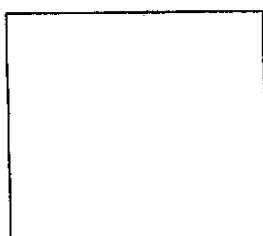


412 56 54-01

 Accessories
Soccer, Thread,
Fabrics, R - foot

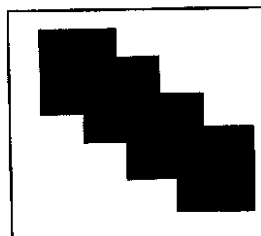

412 60 71-01

 Embroidery #100
Palace script
Clarendon
Calligraphy

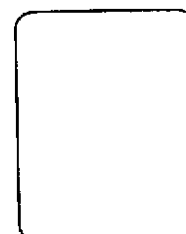

412 51 78-01

Embroidery box