


SERVICE MANUAL

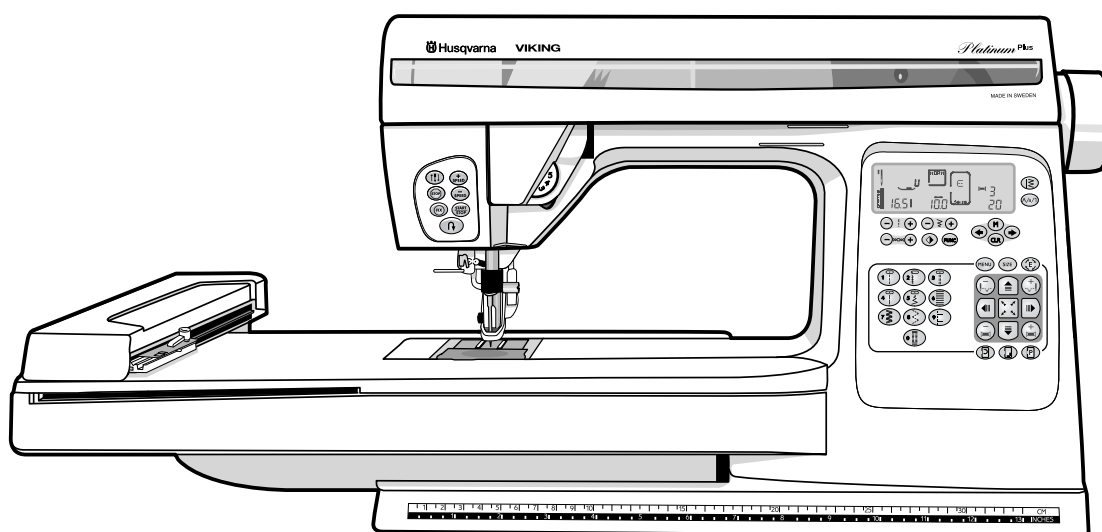

Platinum 770 Platinum Plus

© 2004 VSM Group AB - All Rights Reserved.

Contents

Directions for use	4
ESD	4
Service tools	5

SETTINGS

1. The play of the hook gear	7
2. Setting the hook in relation to the feeding eccentric (after feeding)	8
3. Belt tension, arm/lower shaft belt	9
4. Belt tension, motor belt	9
5. Setting the feed dog in relation to the presser foot	10
6. Basic setting - the step motor of the needle	11
7. Setting of the needle in relation to the presser foot	13
8. The gap between the needle and the hook	14
9. The timing of the hook in relation to the needle	15
10. The needle height	16
11. Presser foot parallelism to the feed dog	17
12. Presser foot height to the stitch plate	17
13. Setting the stitch plate (the hook cover) in relation to the needle in the feeding direction. ...	18
14. The sideways setting of the stitch plate (the hook cover) in relation to the feed dog.	18
15. The height of the hook	19
16. Feed dog height	20
17. Threading device	21
18. Stitch length balance basic setting	22
19. Pre-setting the step motor of the feed dog	22
20. Stitch length balance	23
22. Upper thread tension - Platinum 770	24
21. Lower thread tension (thread tension of the bobbin case)	24
22. Upper thread tension - Platinum Plus Coarse adjustment	26
23. Upper thread tension - embroidery position - Platinum Plus	27
24. Upper thread guard - Platinum Plus	28
25. Setting the thread take-up spring	29
26. Disconnection when winding the bobbin	30

Service program

Service program Platinum Plus	31
Functions of the sensor menu - Sensor check Platinum Plus	33
Upper thread tension - Platinum Plus	33
Service program Platinum 770	34
Functions of the sensor menu - Sensor check	35

Covers

Rear upper cover	36
Rear lower cover	36
Front cover	37
Parts of the front cover - Platinum Plus	38
d- Card Holder	38
d-Card Connection board	38

Dismantling and mounting

Base Plate	39
Transformer	40
Circuit board - Circuit diagram Platinum Plus.....	41
Circuit board - Circuit diagram Platinum 770.....	42
Sewing head.....	43
The step motor of the needle	44
The step motor of the thread tension- Platinum Plus	45
The hook cover compl	46
Hook compl.	47
Feeding unit.....	48
The feeding unit step motor	49
Bobbin winding device.....	50

Embroidery Unit

Cover Y-slide	51
Step motor cover	51
Locker switch.....	52
Cover upper part	52
Cover lower part	52
Embroidery unit - X-unit.....	53
Belt tension.....	53
Calibration of the end position, X-unit.	53
Embroidery unit - Y-unit	54
Belt tension.....	54
Calibration of the end position, Y -unit.....	54
Hoop holder	55
The hoop sensor.....	55
Step motor, Y-unit.....	56
Step motor, X-unit.....	56

Directions for use

These service instructions are intended to be used by service workshop personnel, or by salesmen who carry out servicing their own districts. They assume a thorough knowledge of the handling of precision appliances and accessibility to service tools.

The manual is divided into two sections and covers all service operations and checks which should be carried out when making a complete overhaul of a sewing machine.

The first section deals with the various settings which must be maintained to ensure that the machine functions satisfactorily.

The second section covers dismantling and mounting instructions.


The diagrams only give indication as to where the detail or mechanism is located in the machine. For more detailed information regarding the construction, etc., refer to the diagrams in the spare parts list.

ESD

ATTENTION!

It is of the utmost importance that precautions are being taken in order to avoid damage of the electronics by electro static discharges ESD (=Electro Static Discharge). To avoid that these errors arise it is important to handle loose circuit boards in a controlled way.

Always use wrist band 412 23 02-01 when servicing.

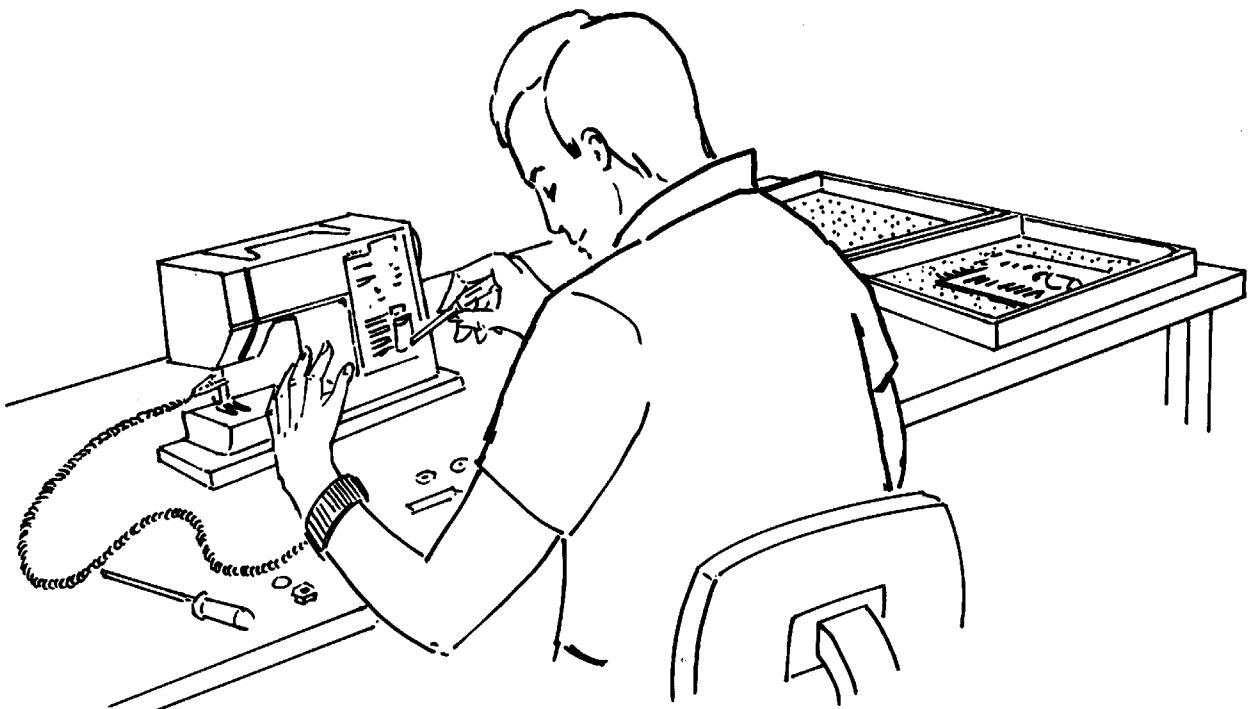


Service tools


A reasonable requirement in a domestic sewing machine is that it should be able to sew all types of fabrics used in the home. The settings made when assembling and sewing in the machines are those most suited to give the best results in the majority of fabrics and fabric combinations. In doing so, consideration has been given to the requirements of different markets. This does, however, mean that when sewing extreme fabrics, better results may be obtained in certain cases by altering the settings. It must be pointed out that these altered settings can cause poorer results on more normal fabrics. How the different standard ratings are set can be seen from the description under each setting instruction. The following list of setting gauges and service tools is intended as an instruction about the special service tools needed to servicing this machine.

1. On several different occasions the needle is used as a setting gauge.
The setting ratings are adapted to needle 90.
Make sure to use an undamaged needle.

2. Gauge for setting the timing of the hook in relation to the needle .
Ref. No 411 17 52-01.

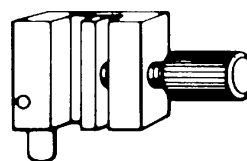

 3. Gauge for the feed dog lift.
Ref. No 411 49 93-01.




4. Gauge for the needle height .
Ref. No 412 35 29-01.



5. Alan key - Shortened 2.5 mm
Ref. No 412 27 65-01

6. Alan key 2 mm
Ref. No 411 86 00-01

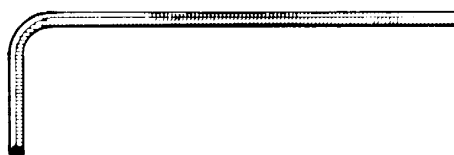

7. Alan key 1.5 mm
Ref. No 411 66 89-01

 
8. Distance gauge 0.05-1,00 mm
Ref: No. 412 38 85-01



9. Angel key Torx 6
Ref No 412 27 67-01

10. Screwdriver Torx 10
Ref. No 412 36 48-01.

11. Screwdriver Torx 20
Ref. No 412 36 49-01.



12. Screwdriver Torx 25
Ref. No 412 36 50-01

13. Service DVD Platinum Plus , Platinum 770
Ref. No 412 84 94-01

SETTINGS

